

# TEMPSHIELD ASSEMBLY INSTRUCTIONS

## FORD TRANSIT 148'' CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)

56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents

Walls ..... 3

    Parts List – Driver Side Wall ..... 3

    Parts List – Passenger Side Wall ..... 3

    Assembly Instructions ..... 4

Ceiling ..... 5

    Parts List – Ceiling ..... 5

    Assembly Instructions ..... 5

Doors ..... 6

    Parts List – Sliding Door ..... 6


    Parts List – Rear Door ..... 6

    Assembly Instructions ..... 7


Sheet Layouts ..... 8

# Walls

## Parts List – Driver Side Wall

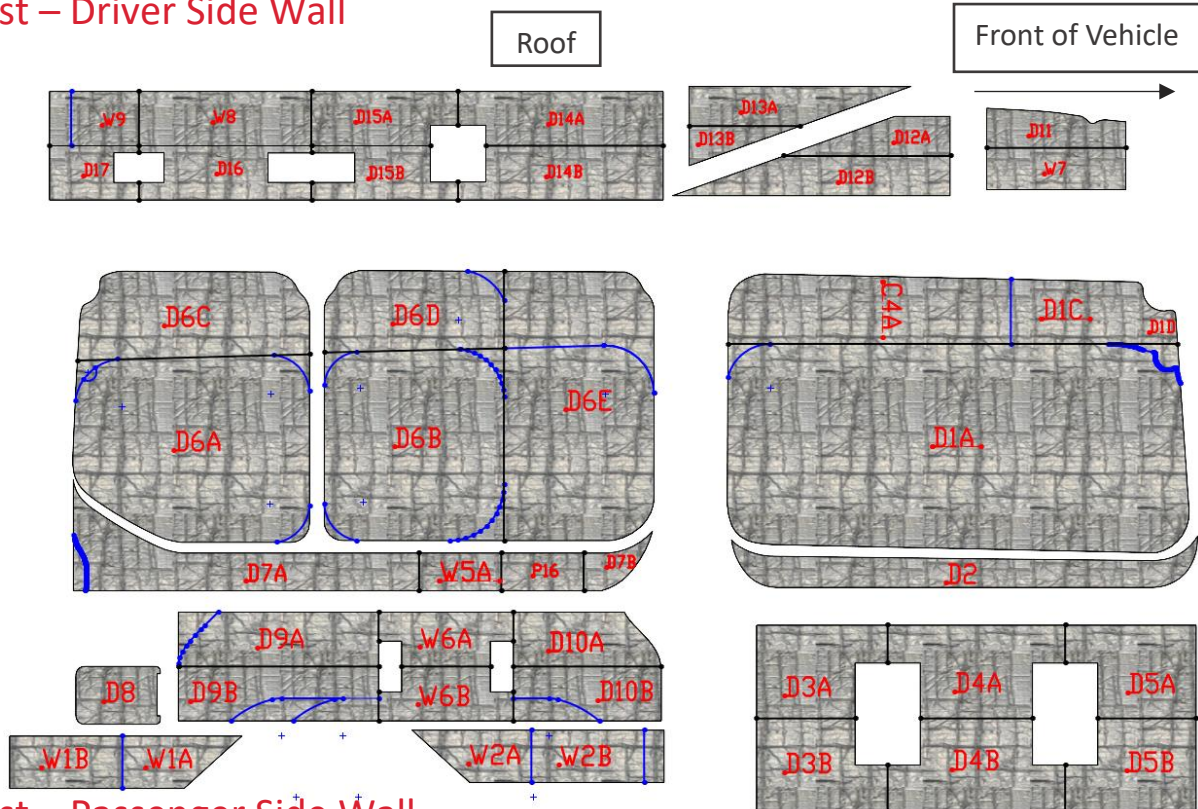

## Parts List – Passenger Side Wall

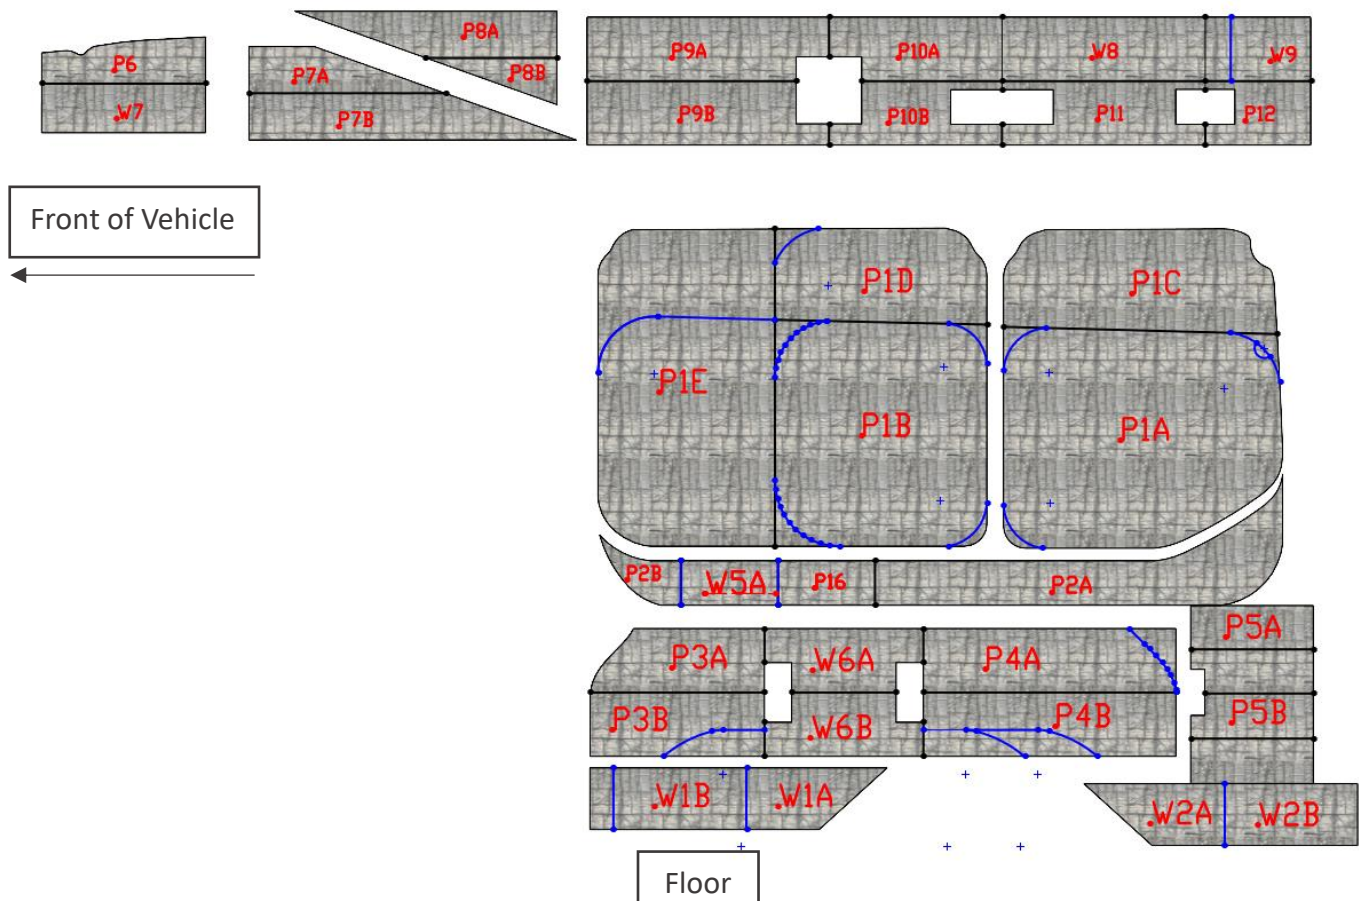



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body. For ease of installation, install the outside panels first in pocketed areas. E.g. install W7-A/B before W6-A/B.

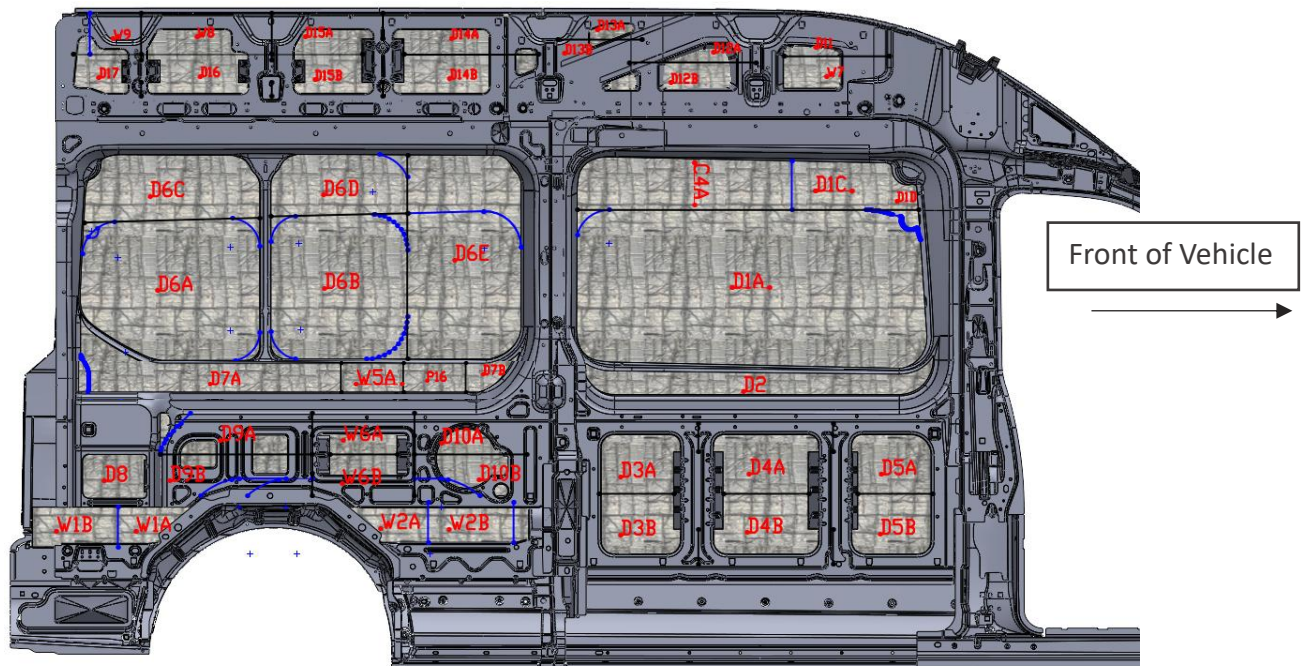


Figure 1: "Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side

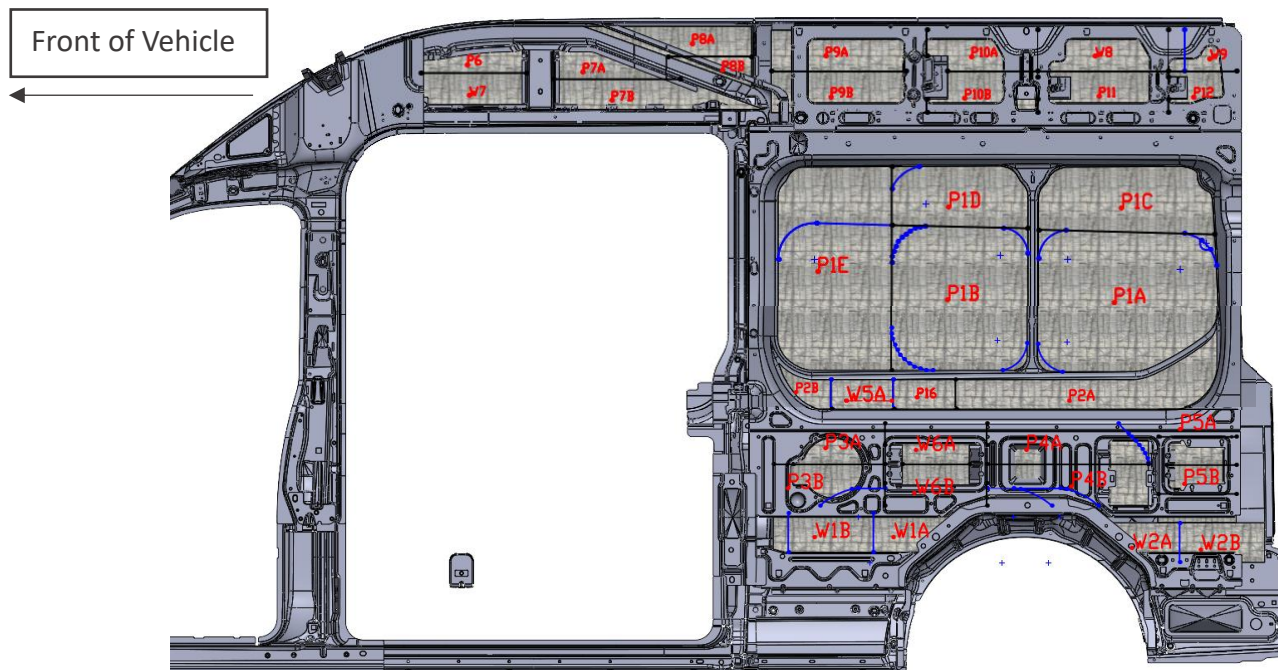


Figure 2: "Passenger side TempShield Installed" This view is from Inside of Van-Viewing from Driver side



# Ceiling

## Parts List – Ceiling



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


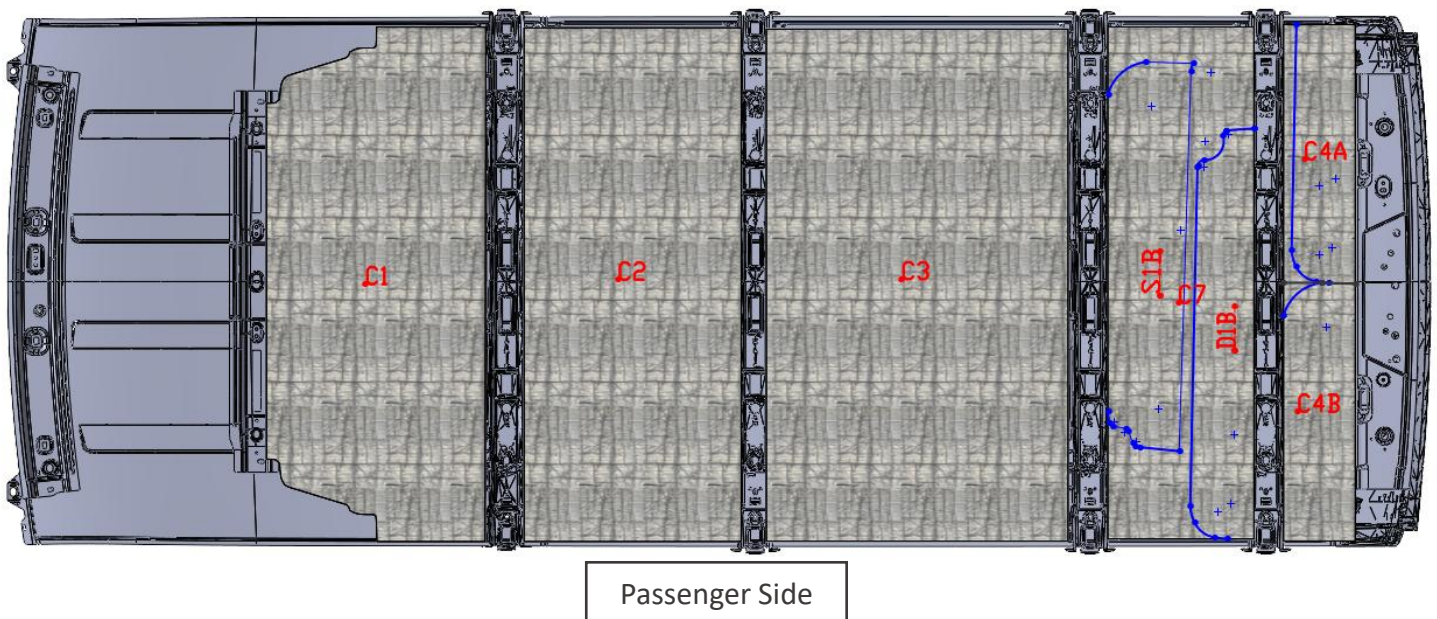


Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van


# Doors

## Parts List – Sliding Door

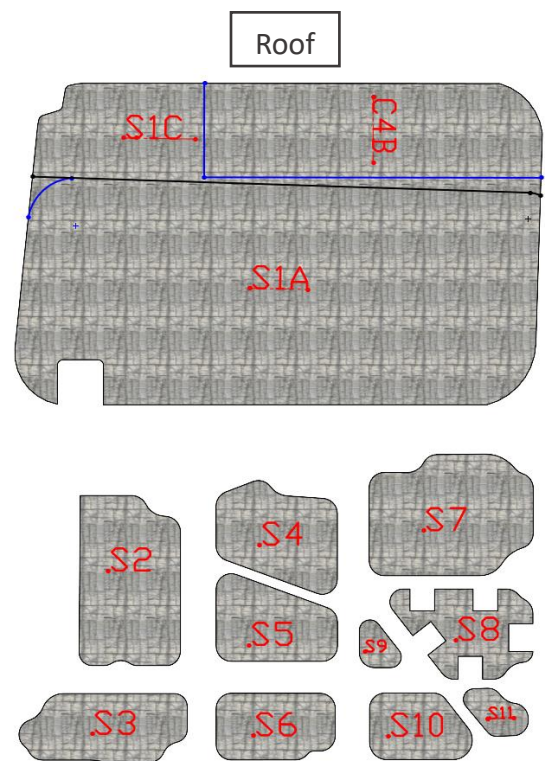

## Parts List – Rear Door

**Panels R13 and R14 are not required when installing Legend Door Liners.**

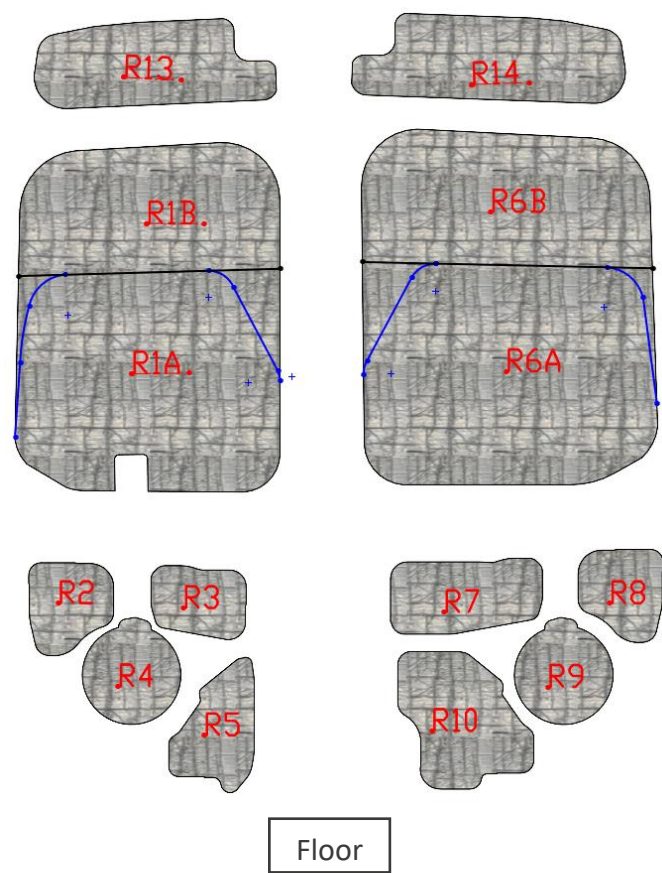




## Assembly Instructions


**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

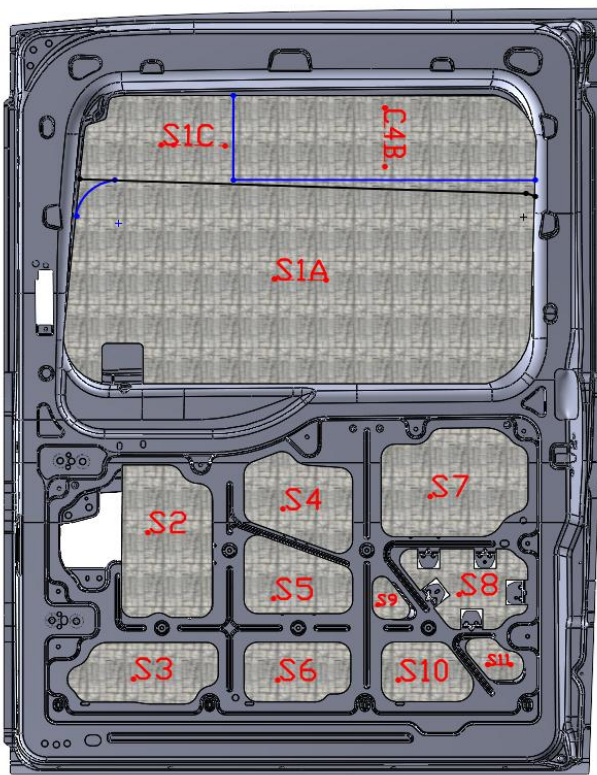

Passenger Side Sliding Door TempShield

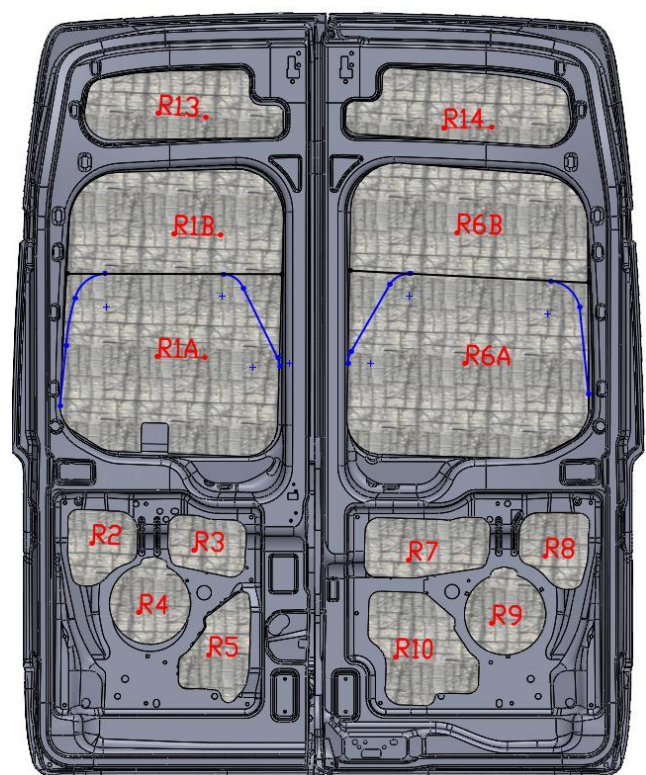

Rear Door TempShield

# Sheet Layouts

Sections highlighted in red are not required.

