

ASSEMBLY INSTRUCTIONS

FORD TRANSIT 148" EXTENDED CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com


56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

Table of Contents


Walls	3
Parts List – Driver Side Wall.....	3
Parts List – Passenger Side Wall	4
Assembly Instructions.....	5
Ceiling	6
Parts List – Ceiling.....	6
Assembly Instructions.....	6
Doors	7
Parts List – Sliding Door	7
Parts List – Rear Door	8
Assembly Instructions.....	9
Sheet Layouts	10

Walls

Parts List – Driver Side Wall

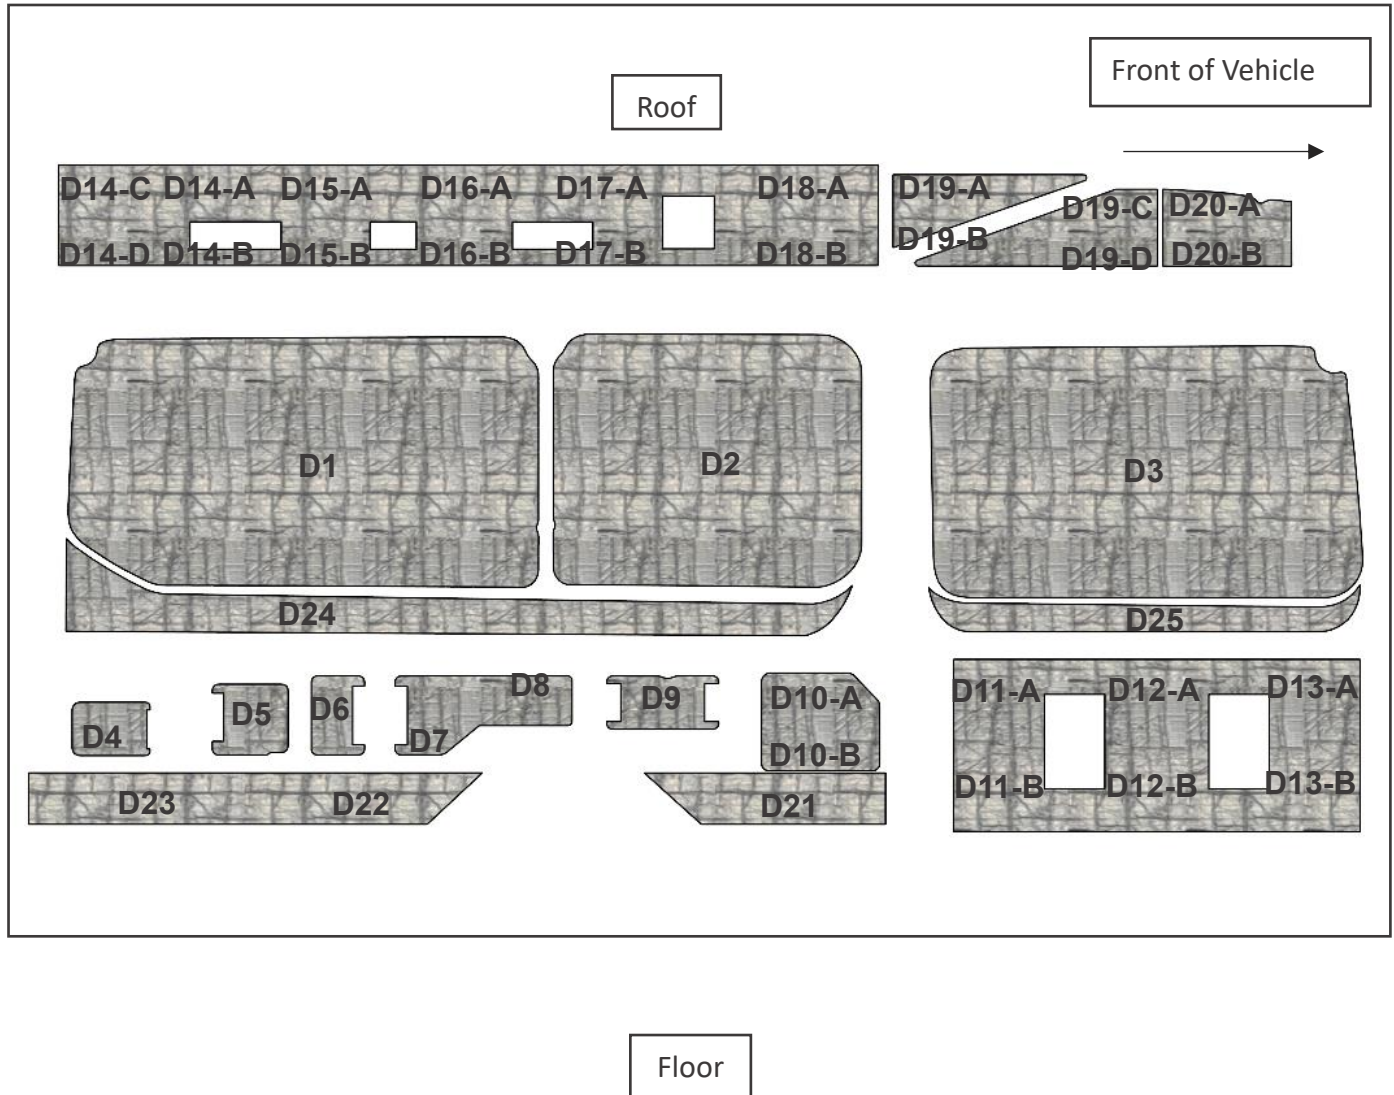

Parts List – Passenger Side Wall

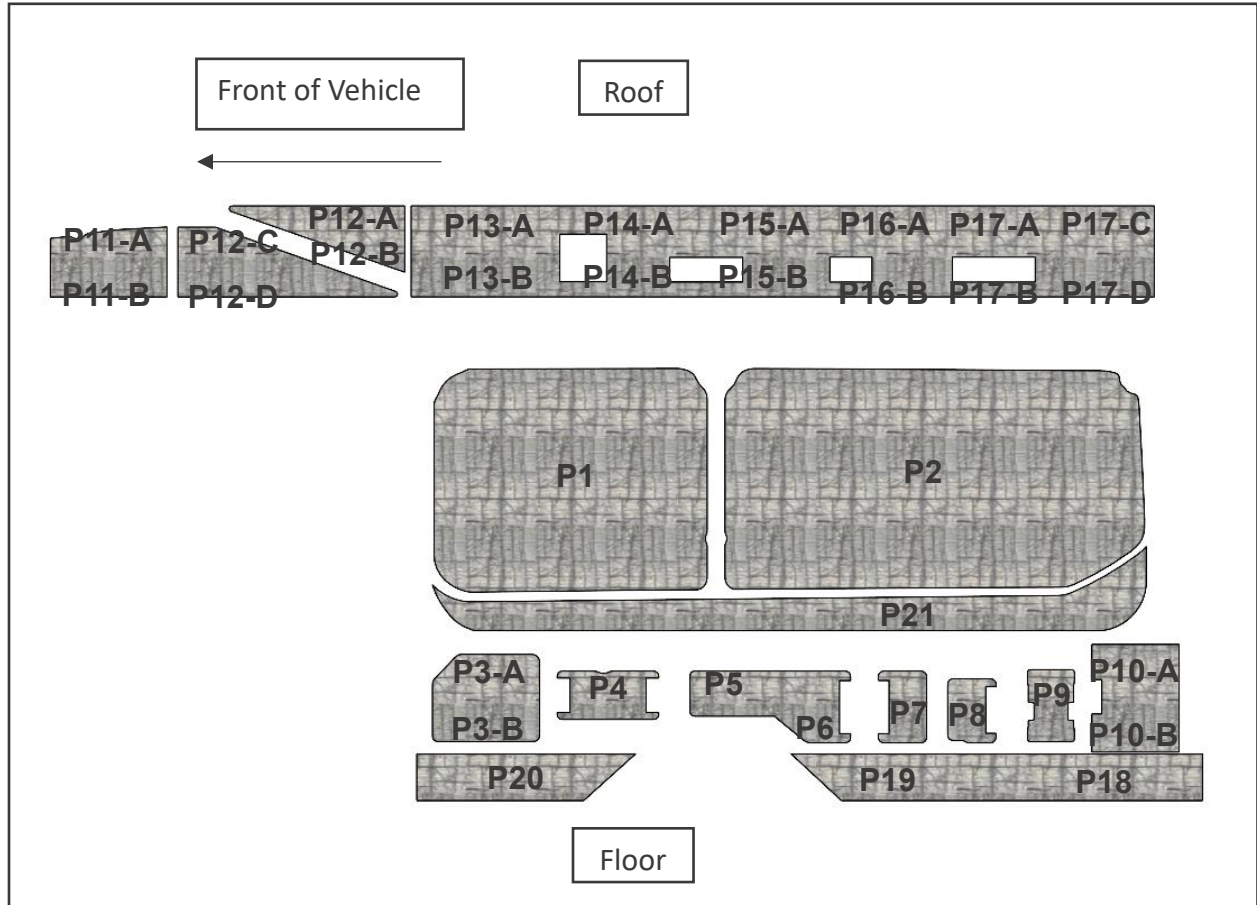

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body. For ease of installation, install the outside panels first in pocketed areas. E.g. install D14-C/D before D14-A/B.

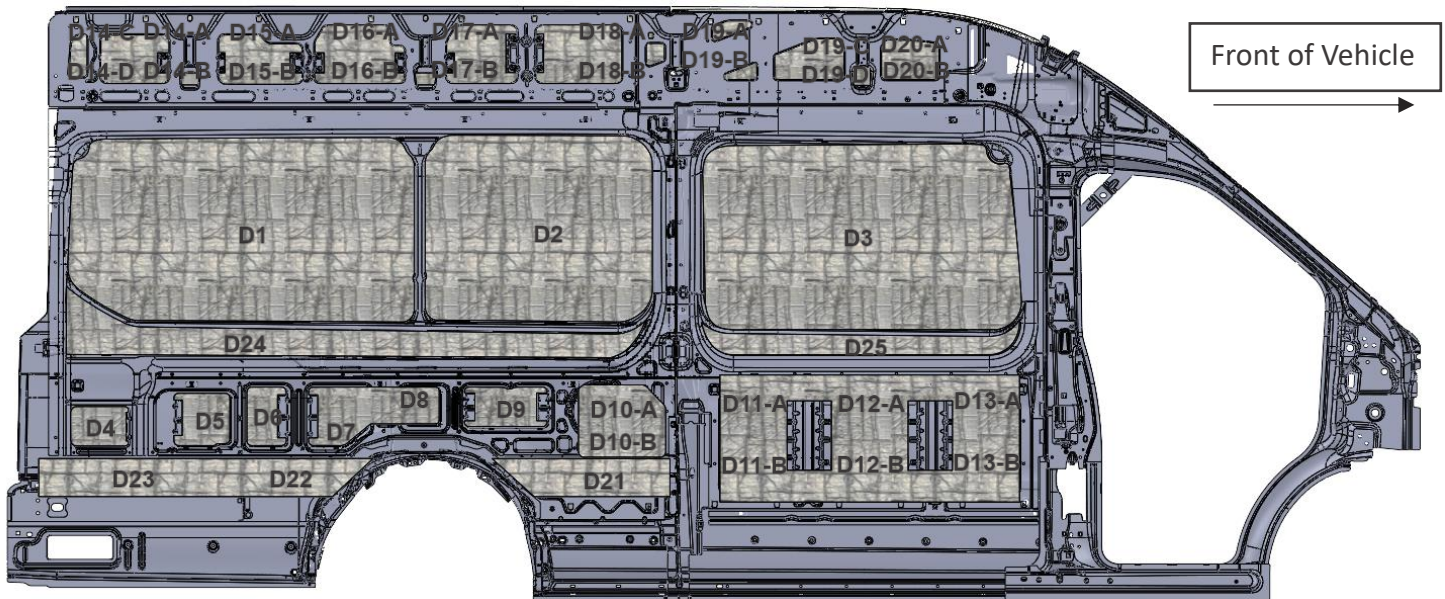


Figure 1: "Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side


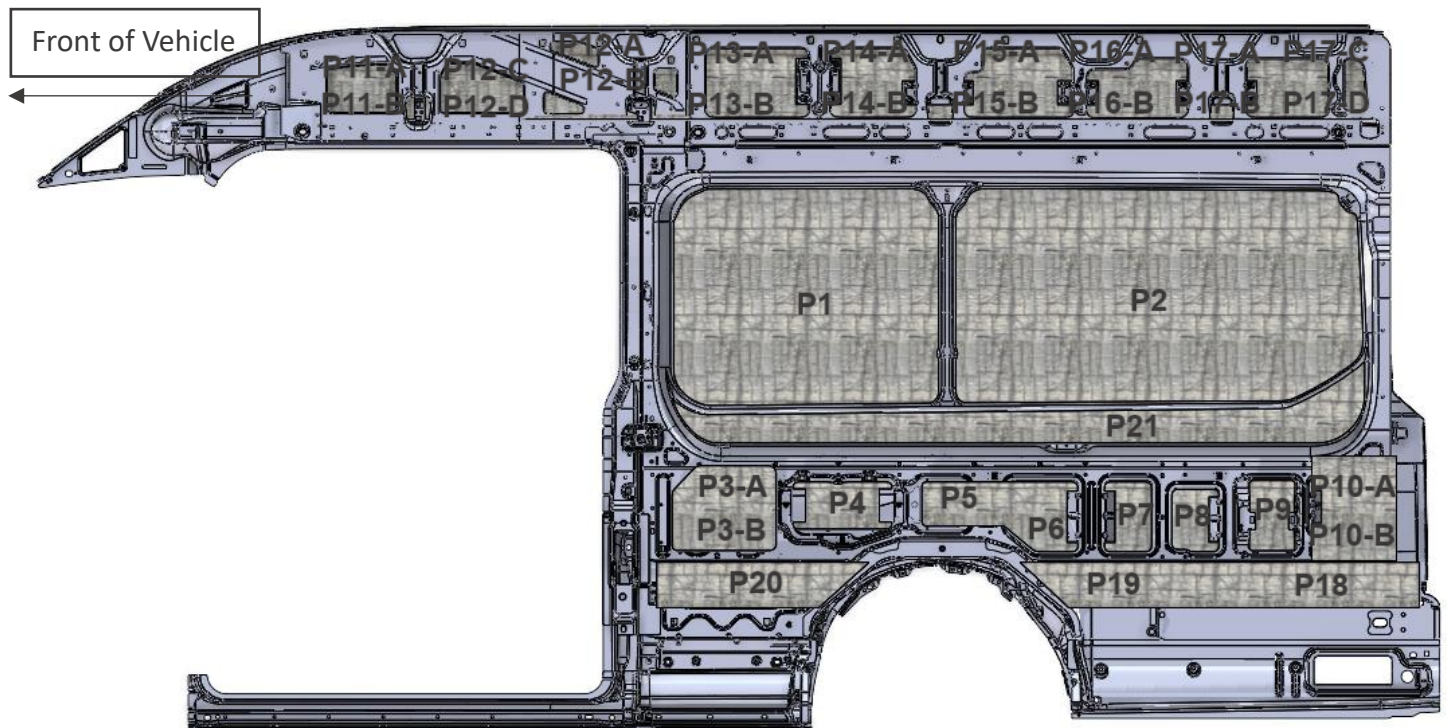


Figure 2: "Passenger side TempShield Installed" This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling

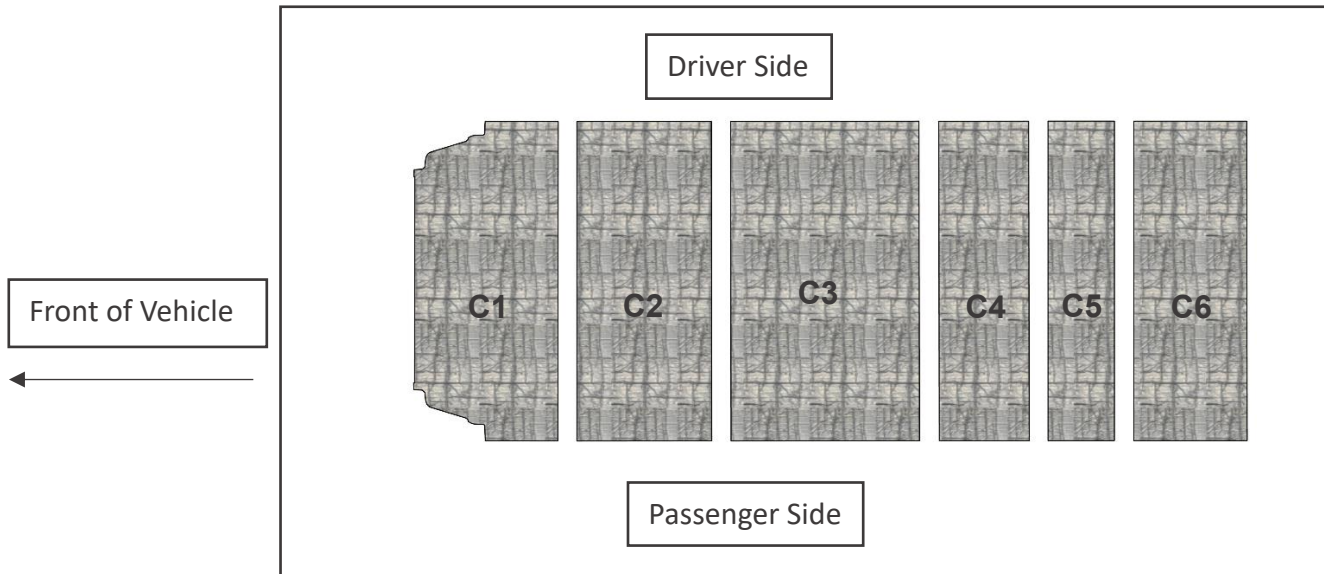

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


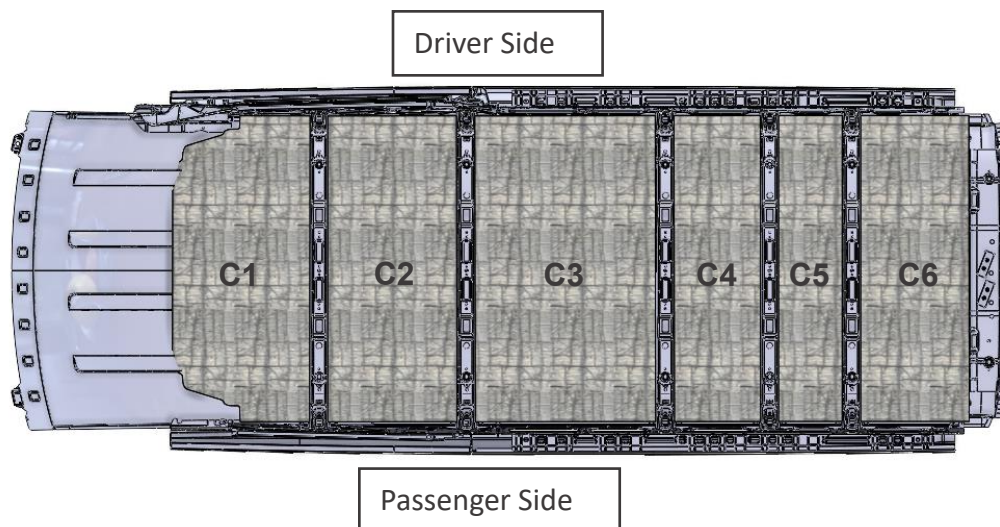


Figure 3

"Ceiling TempShield Installed" This view is from Inside of Van


Doors

Parts List – Sliding Door

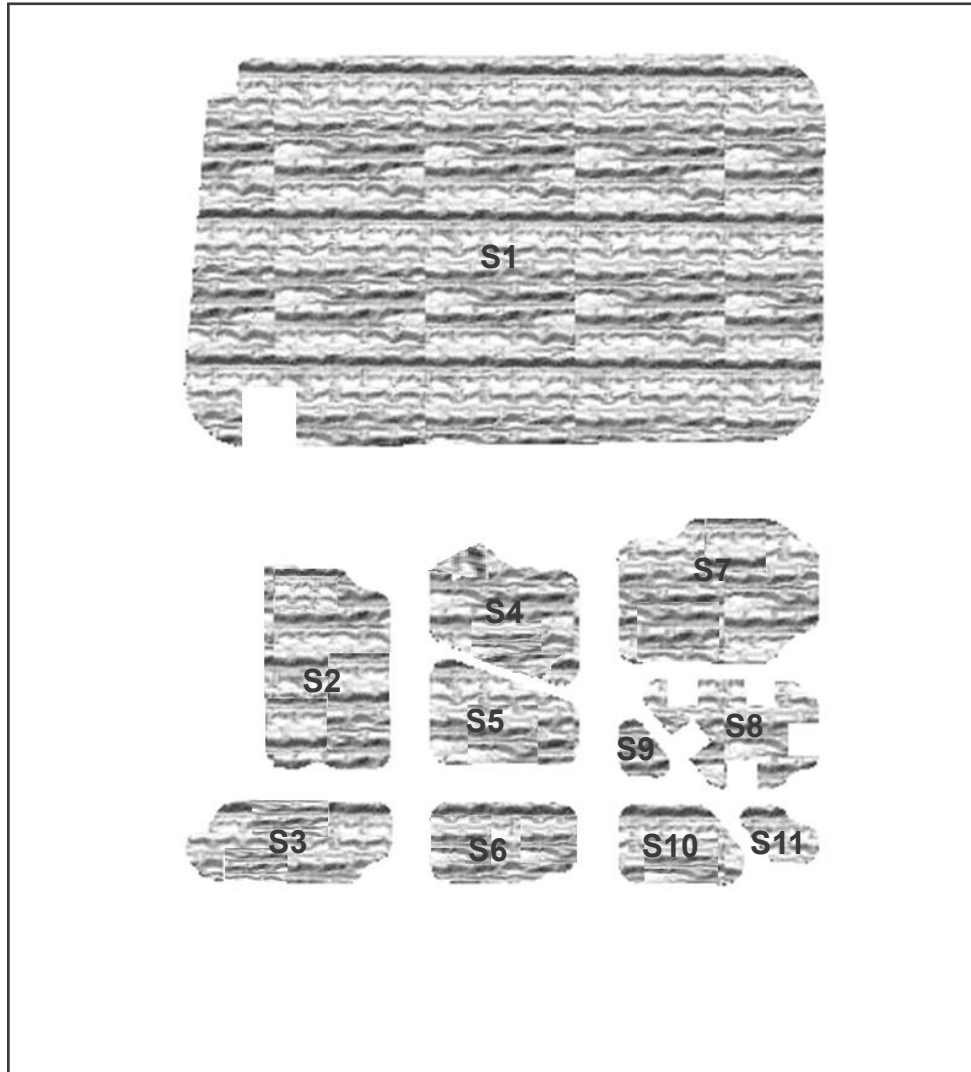

Passenger Side Sliding Door

Parts List – Rear Door

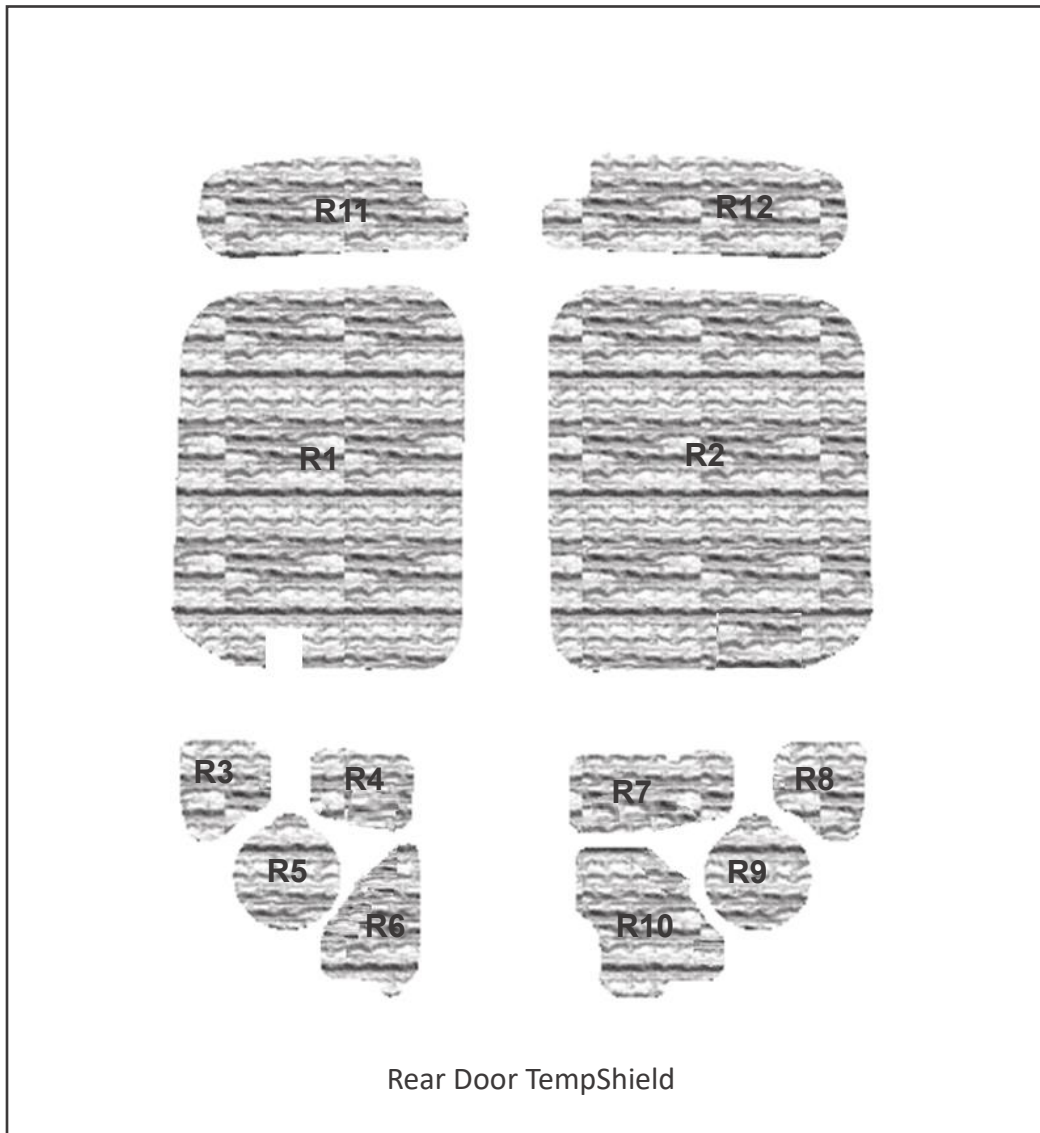


Assembly Instructions


Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

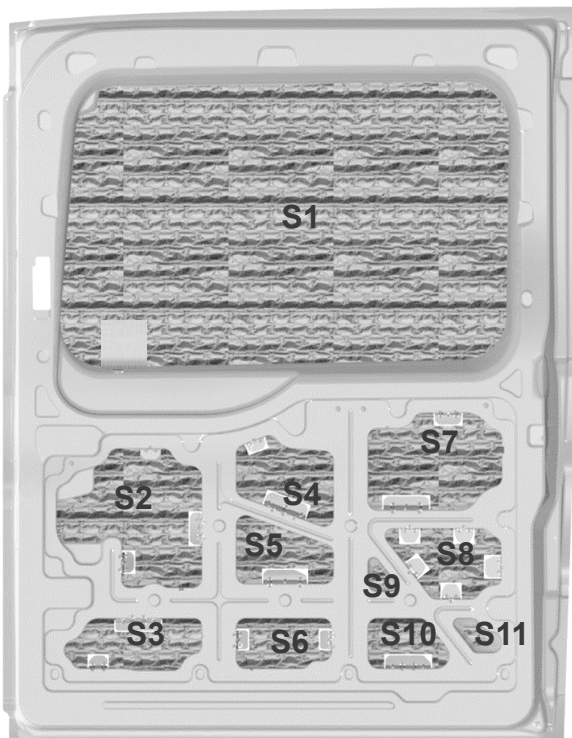

Passenger Side Sliding Door TempShield

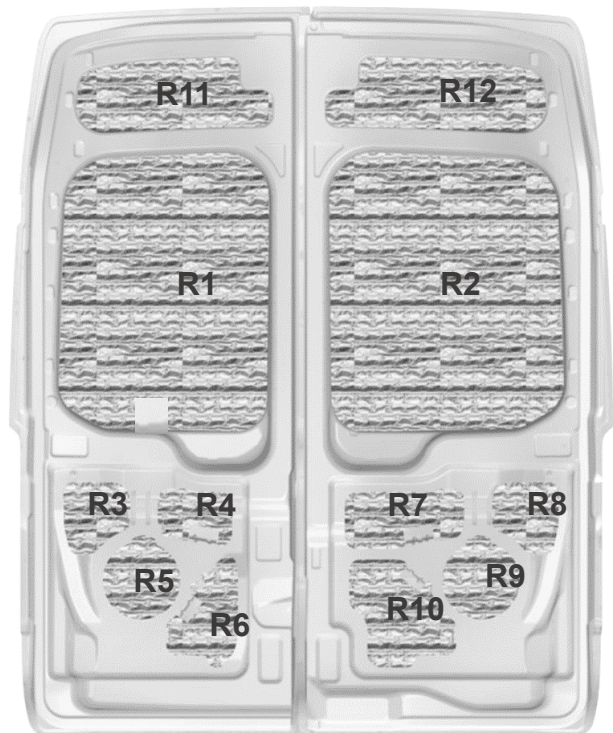

Rear Door TempShield

Sheet Layouts

