

TEMPSHIELD ASSEMBLY INSTRUCTIONS

MERCEDES SPRINTER 144'' CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com

56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

Table of Contents

Walls 3

 Parts List – Driver Side Wall.....3

 Parts List – Passenger Side Wall3

 Assembly Instructions.....4

Ceiling 5

 Parts List – Ceiling.....5

 Assembly Instructions.....5

Doors 6

 Parts List – Sliding Door6


 Parts List – Rear Door6

 Assembly Instructions.....7


Sheet Layouts 8

Walls

Parts List – Driver Side Wall

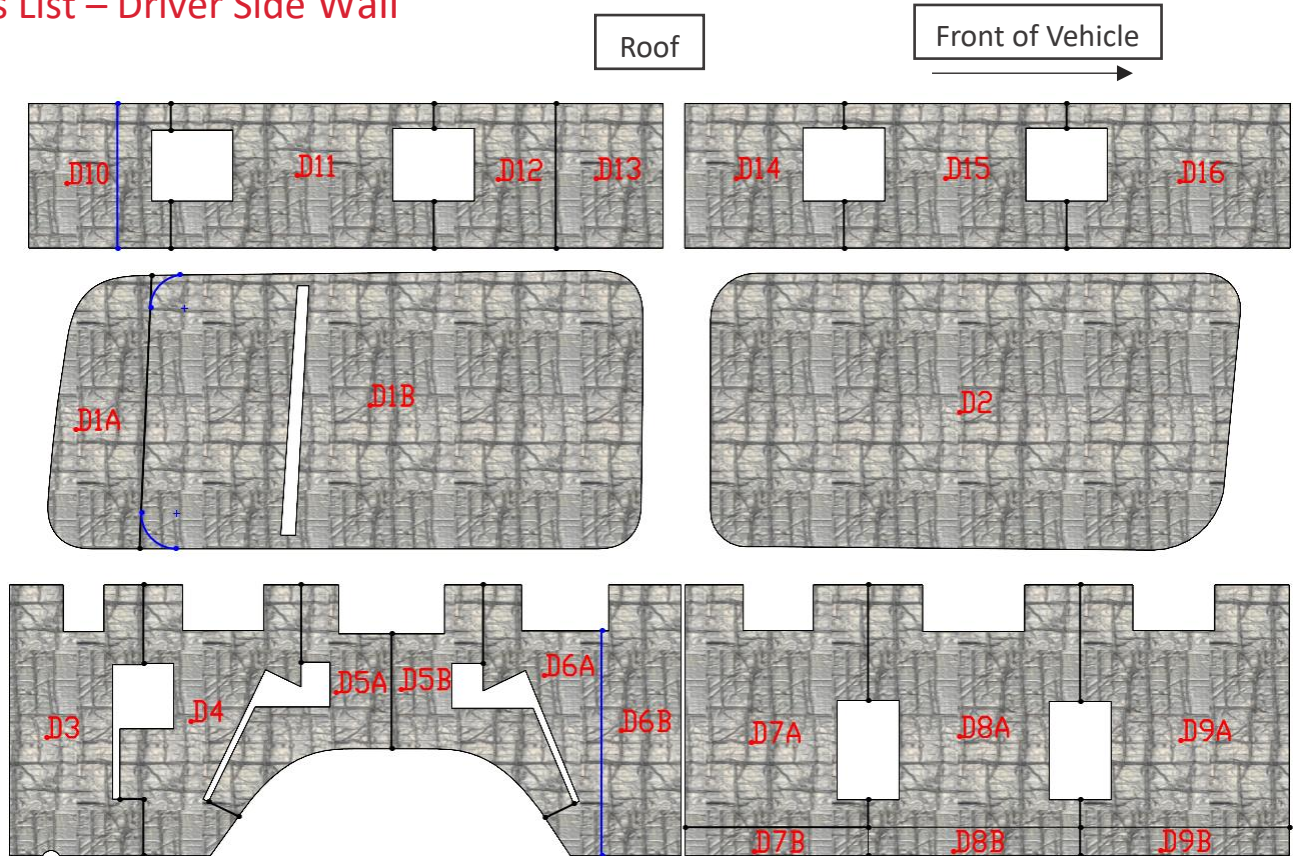

Parts List – Passenger Side Wall

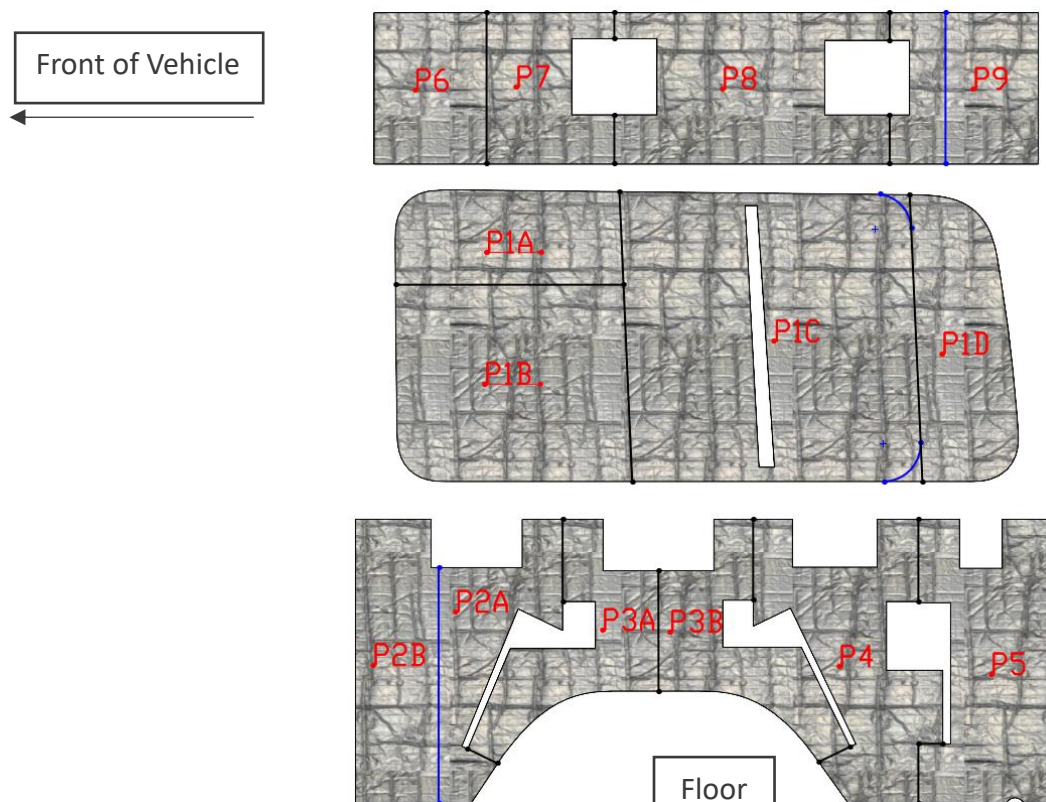

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

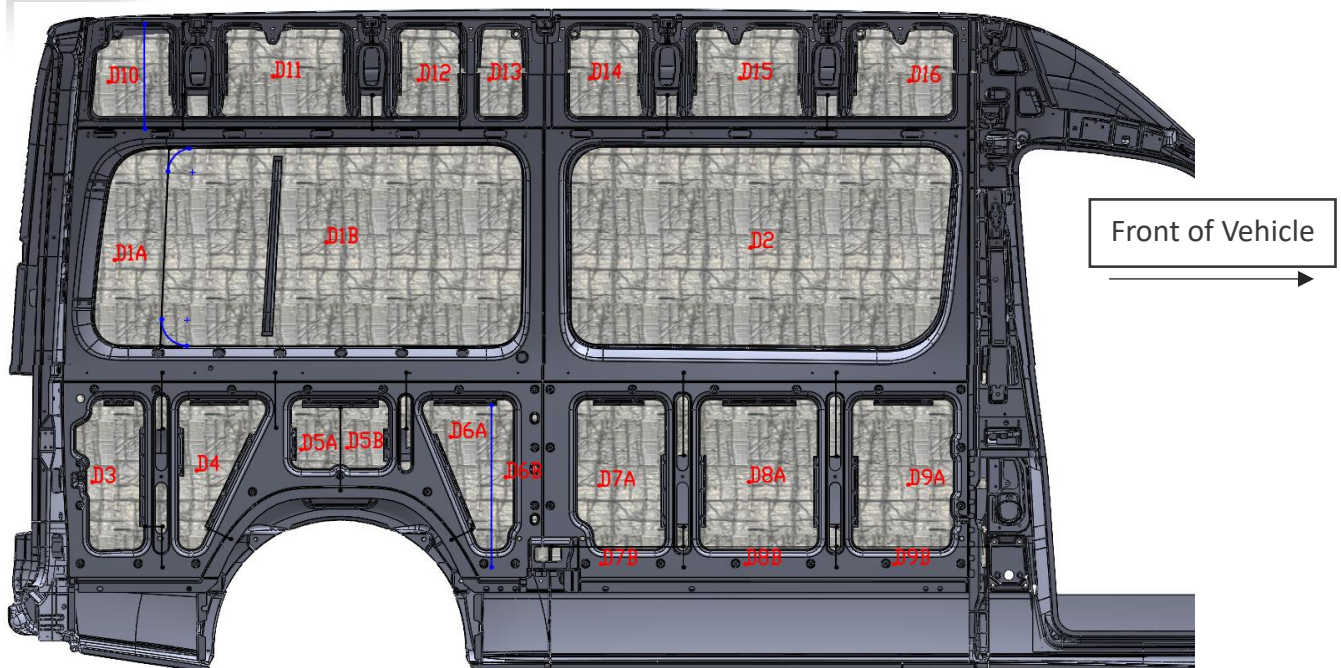


Figure 1: "Driver Side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side


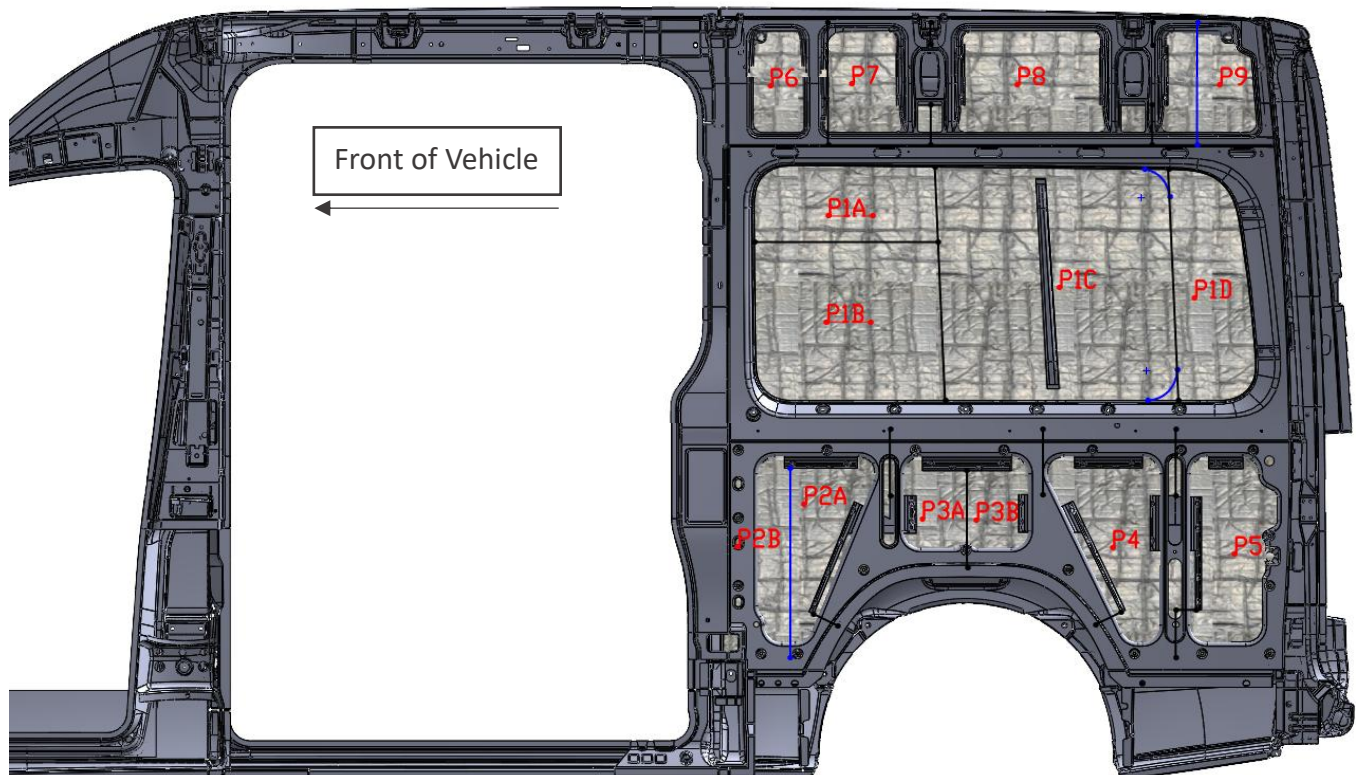


Figure 2: "Passenger Side TempShield Installed" This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling

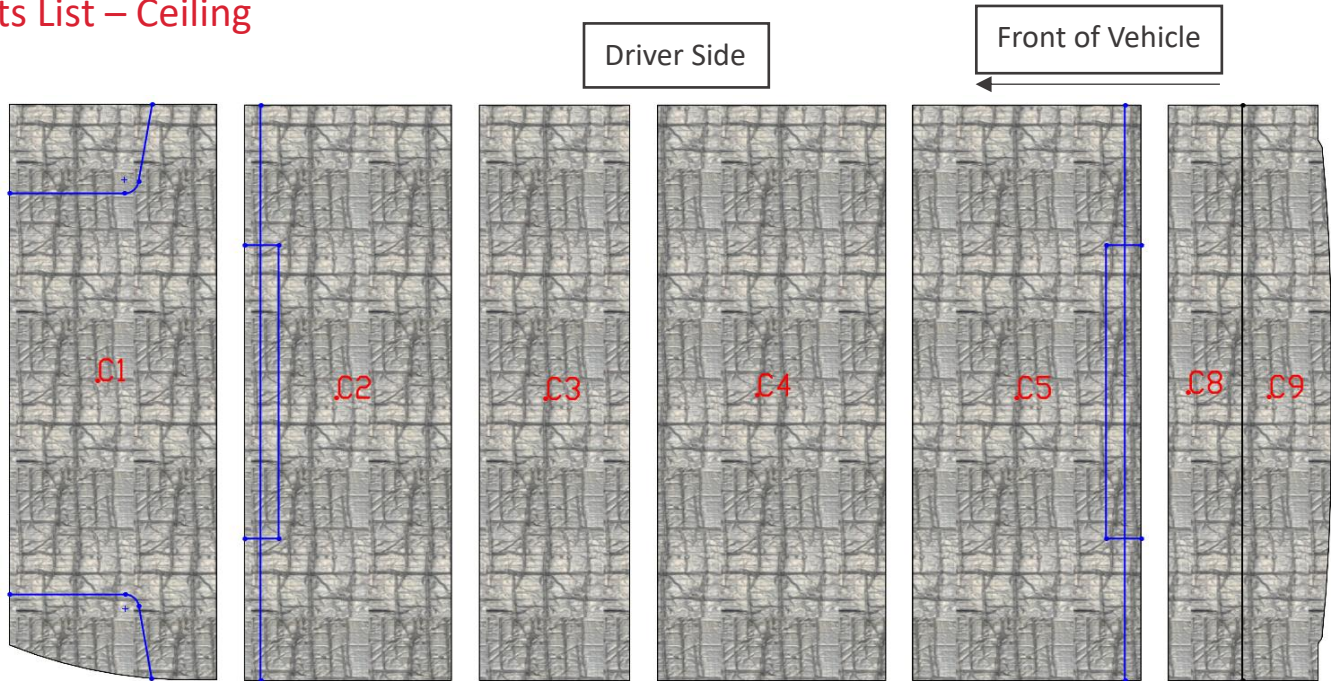

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


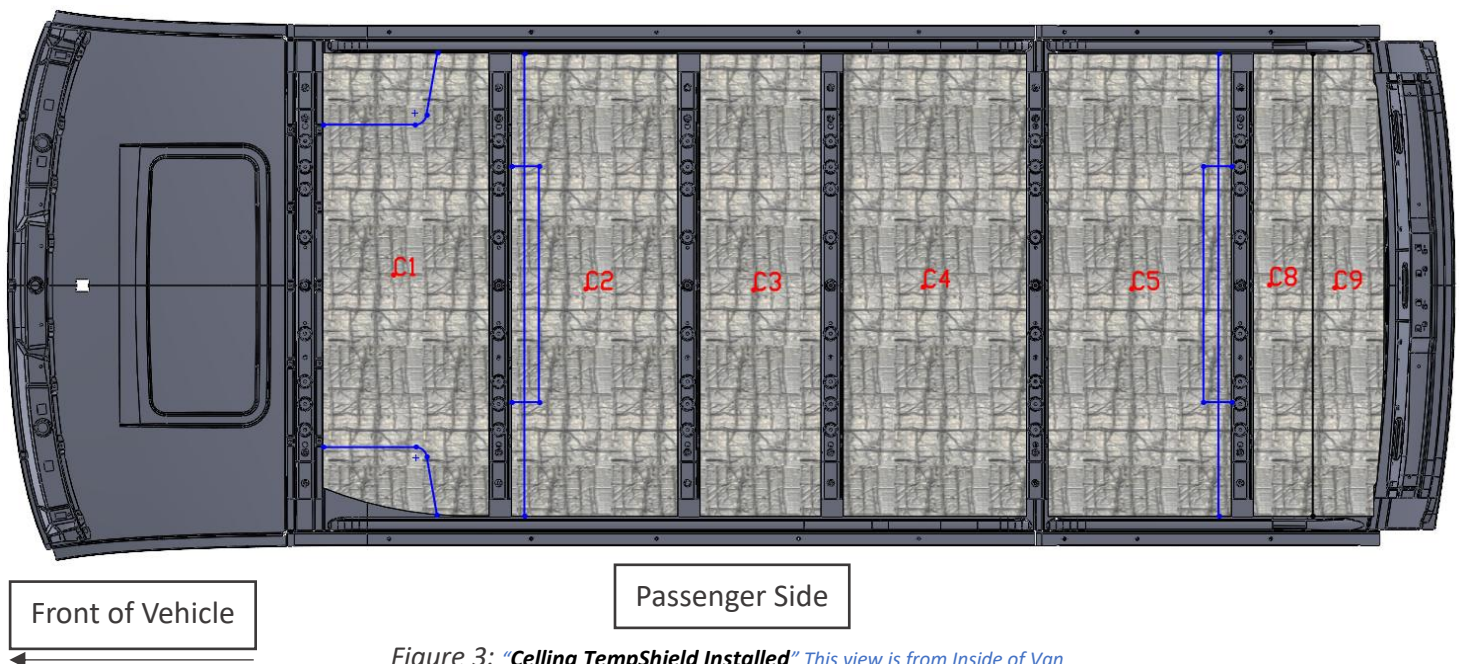



Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van

Doors

Parts List – Sliding Door

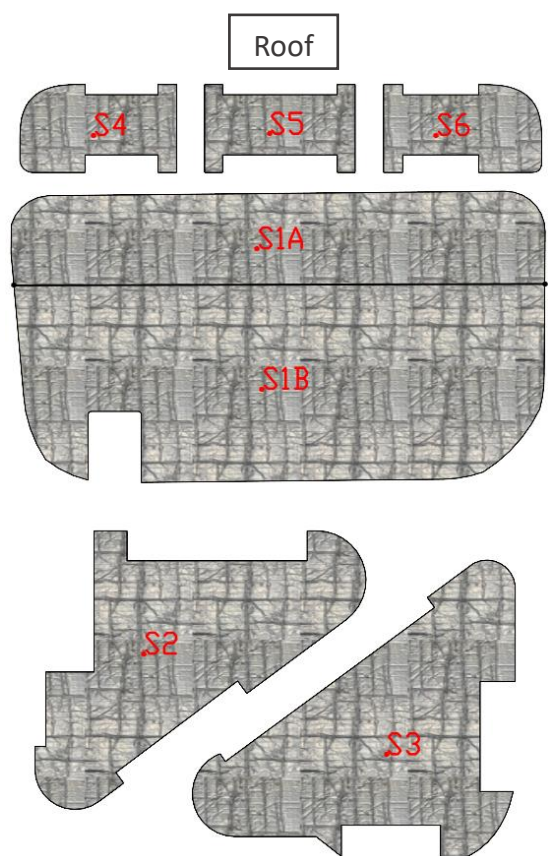

Parts List – Rear Door

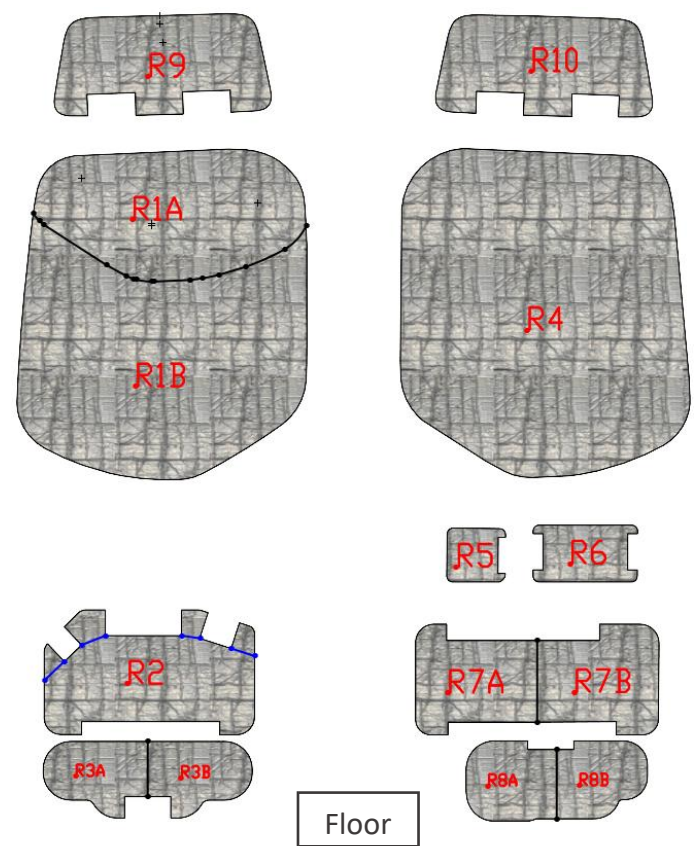


Assembly Instructions


Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

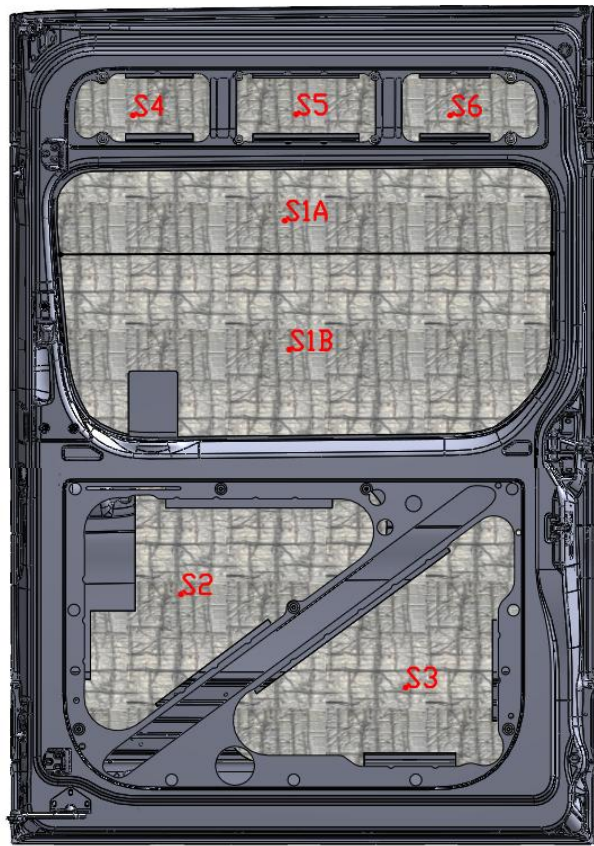

Sliding Door TempShield

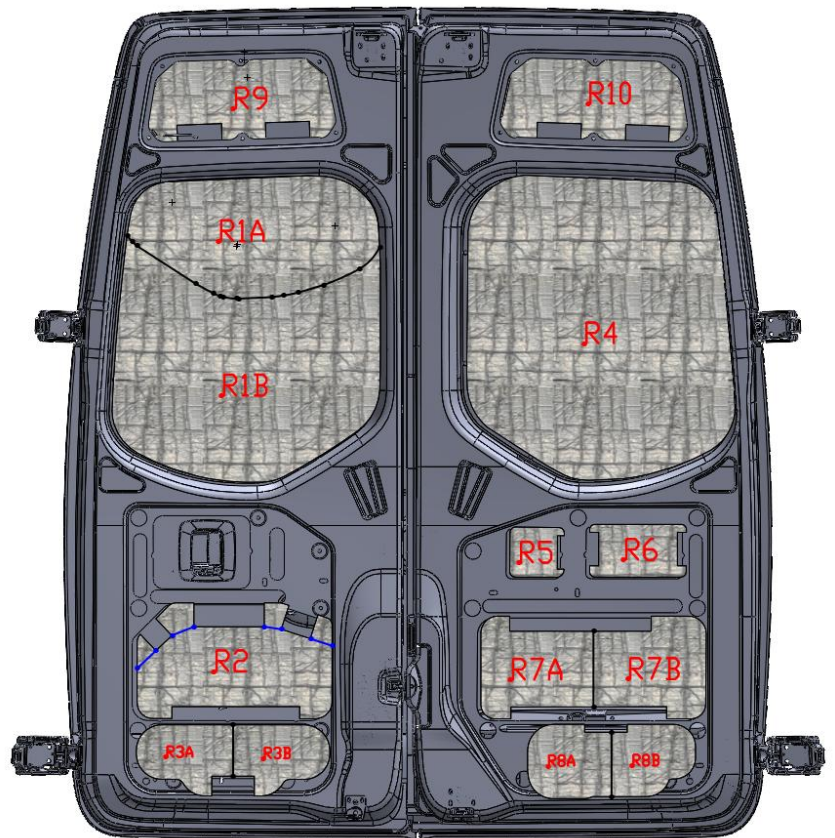

Rear Door TempShield

Sheet Layouts

Sections highlighted in red are not required. Sheet layouts in green are the window panels.

