

# TEMPSHIELD ASSEMBLY INSTRUCTIONS

## MERCEDES SPRINTER 144" CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)


56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents


Walls .....	3
Parts List - Driver Side Wall.....	3
Parts List - Passenger Side Wall .....	4
Assembly Instructions.....	5
Ceiling .....	6
Parts List – Ceiling.....	6
Assembly Instructions.....	6
Doors .....	7
Parts List – Sliding Door .....	7
Parts List – Rear Door .....	8
Assembly Instructions.....	9
Sheet Layouts .....	10

# Walls

## Parts List - Driver Side Wall

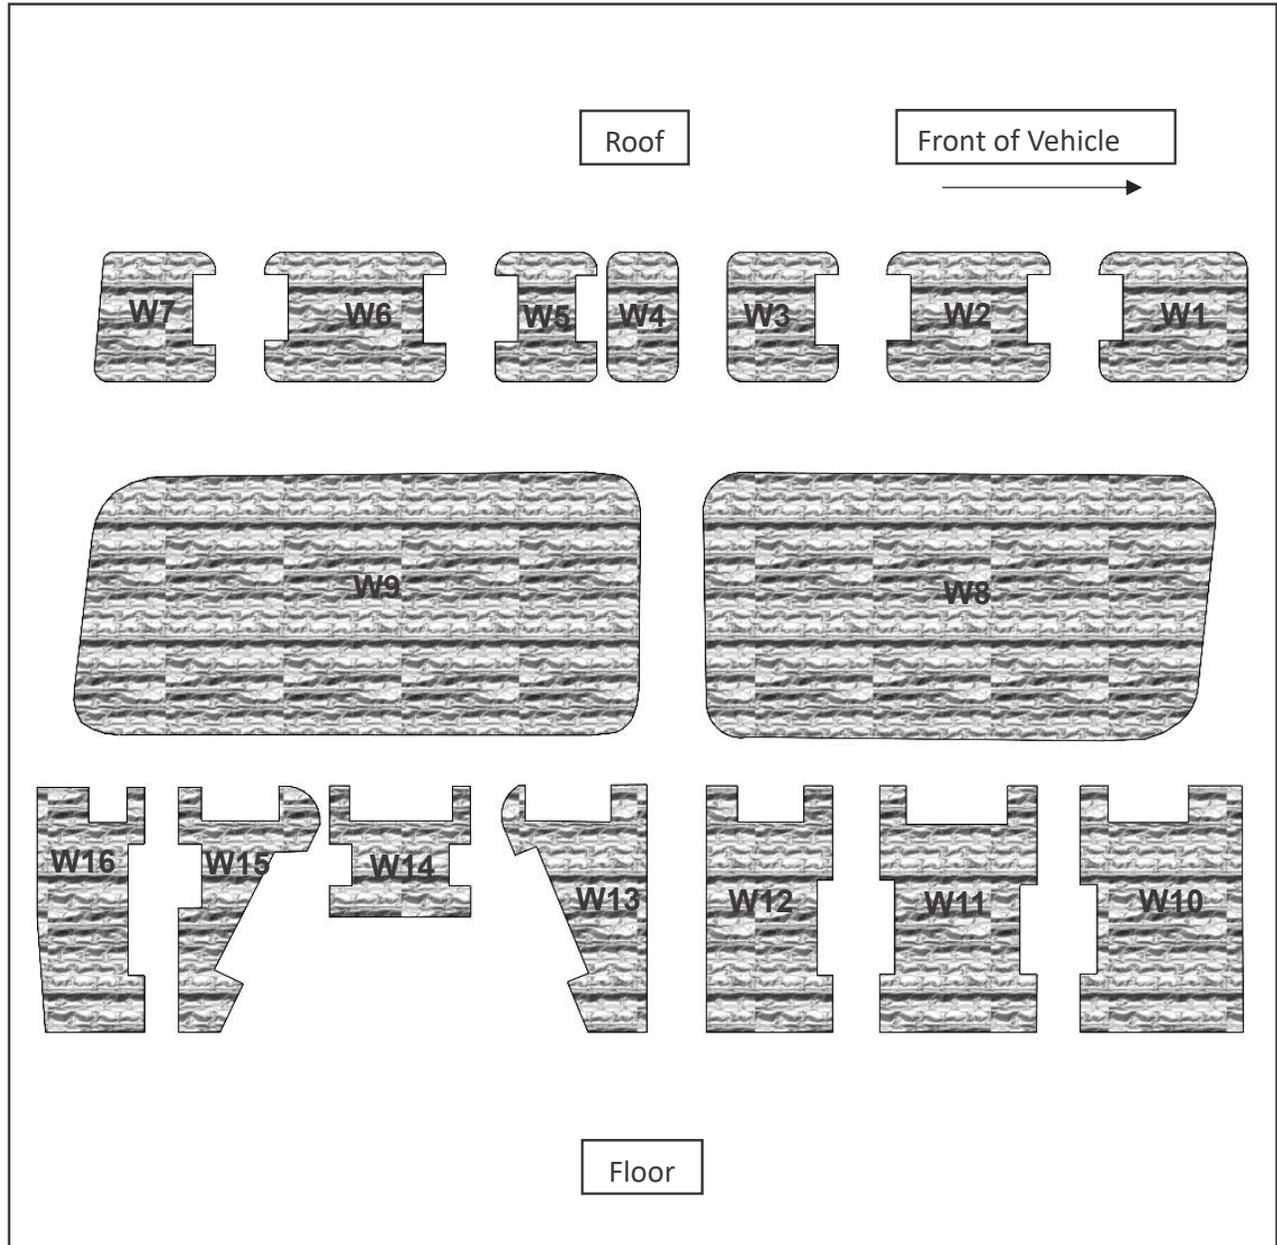

# Parts List - Passenger Side Wall

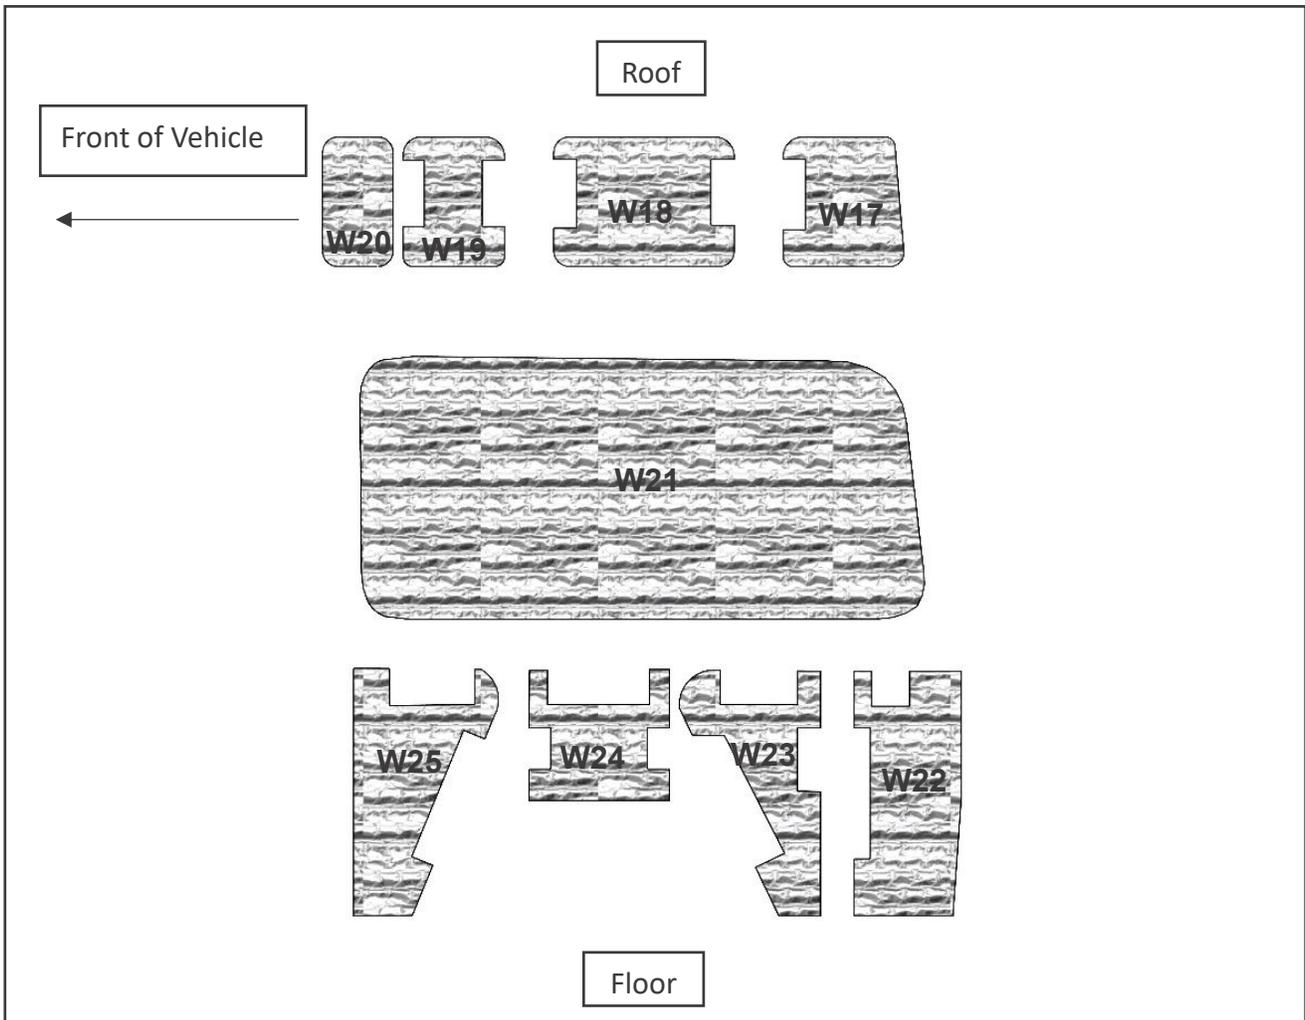

## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

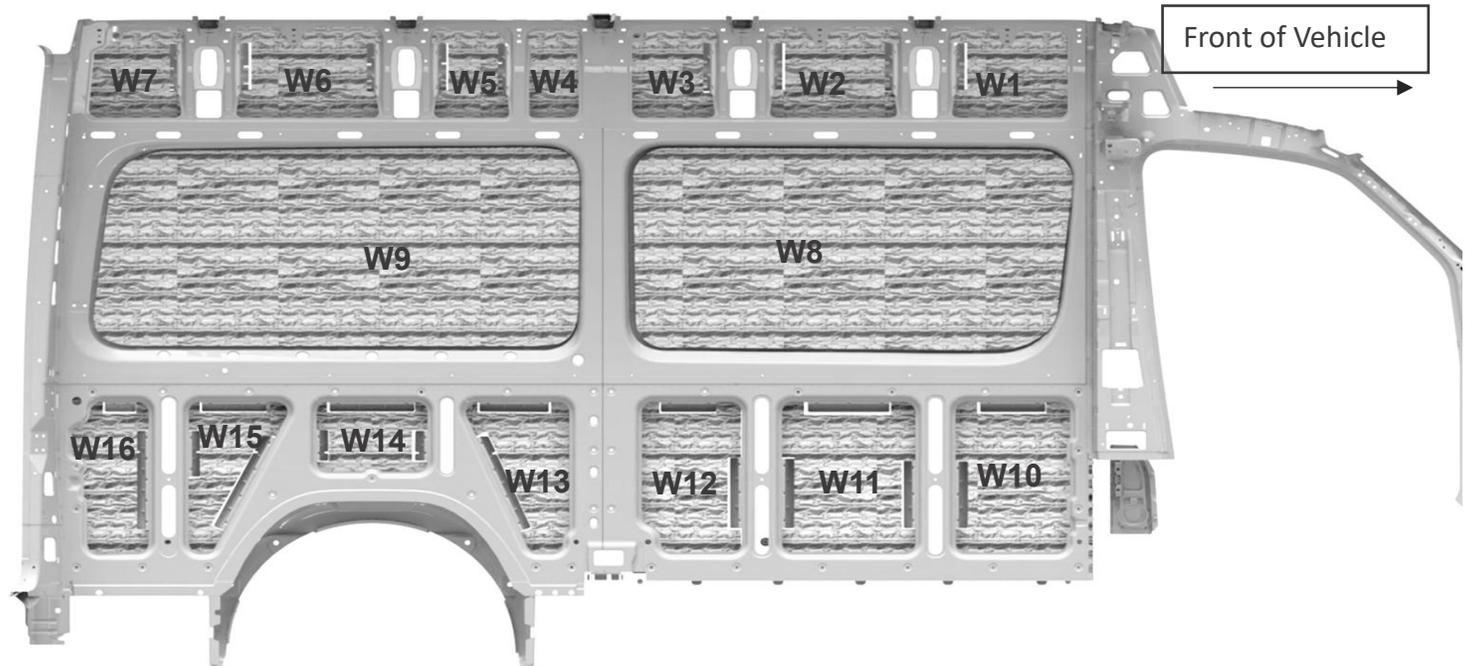


Figure 1

*"Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side*

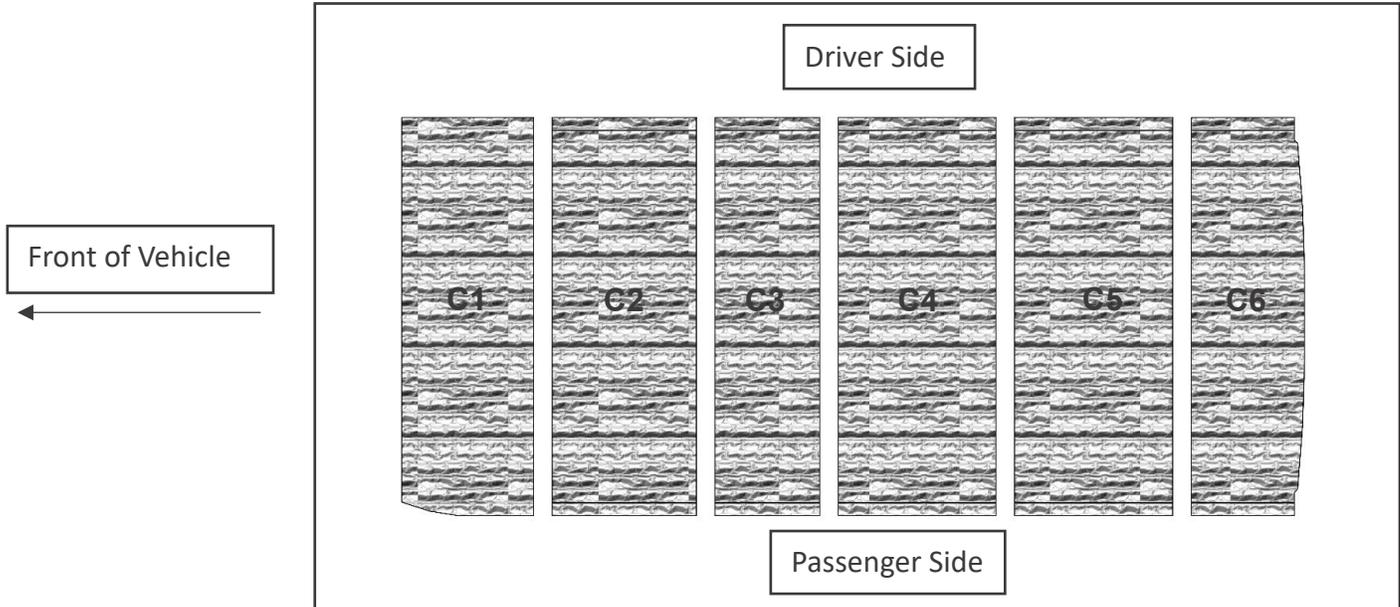


Figure 2

*"Passenger side TempShield Installed" This view is from Inside of Van-Viewing from Driver side*

# Ceiling

## Parts List – Ceiling



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


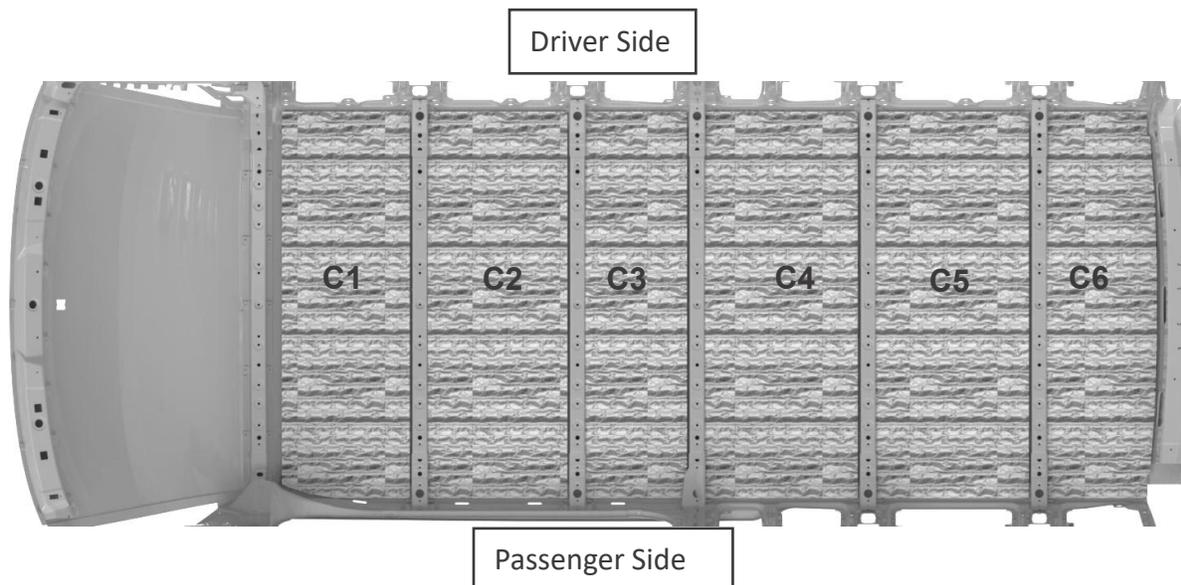


Figure 3


*"Ceiling TempShield Installed" This view is from Inside of Van*

# Doors

## Parts List – Sliding Door

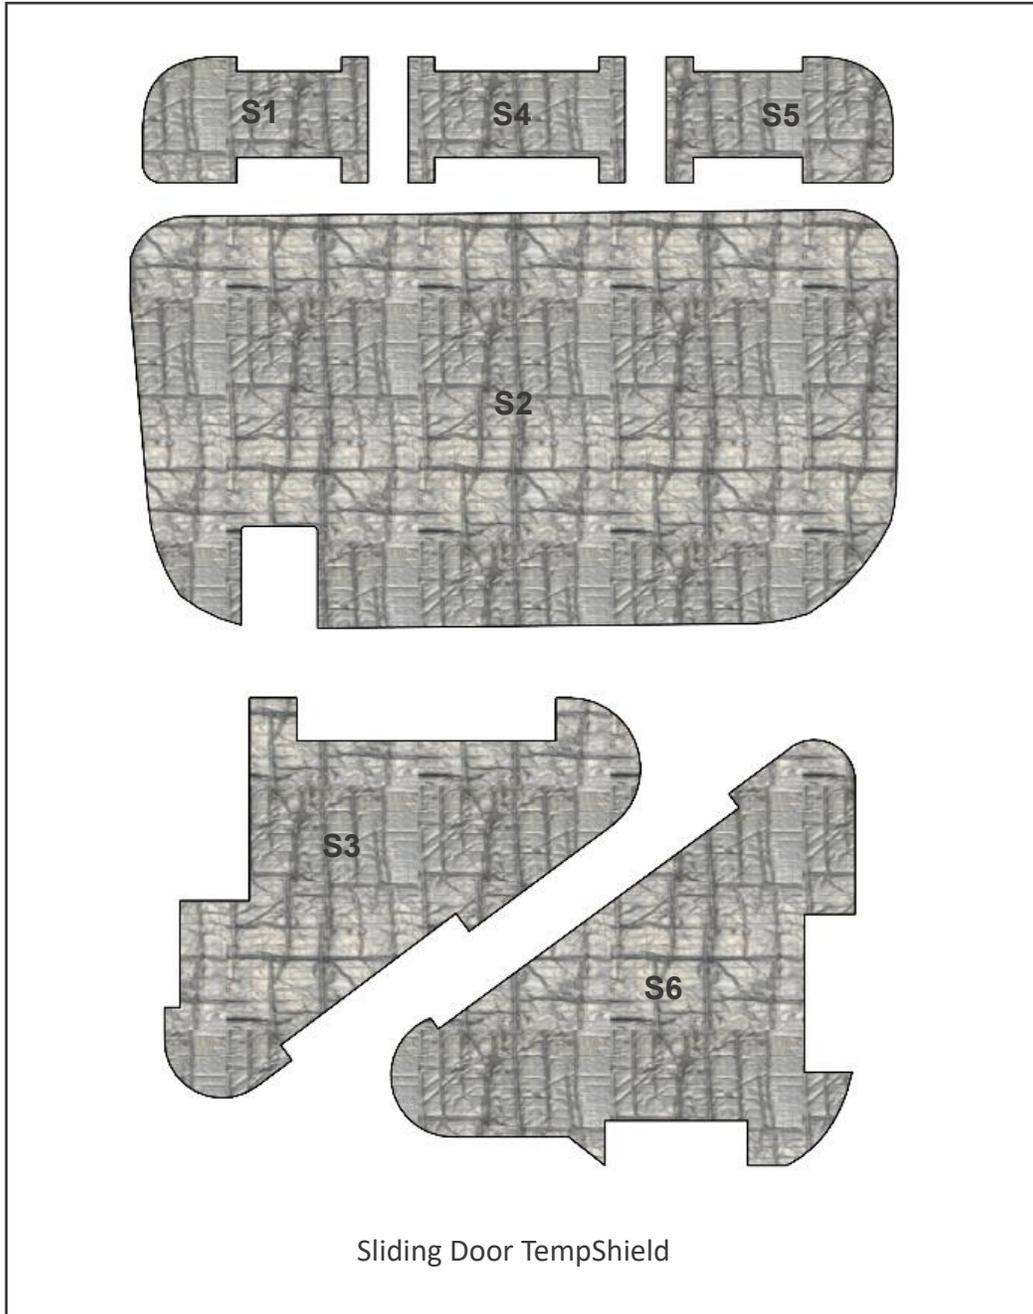

# Parts List – Rear Door

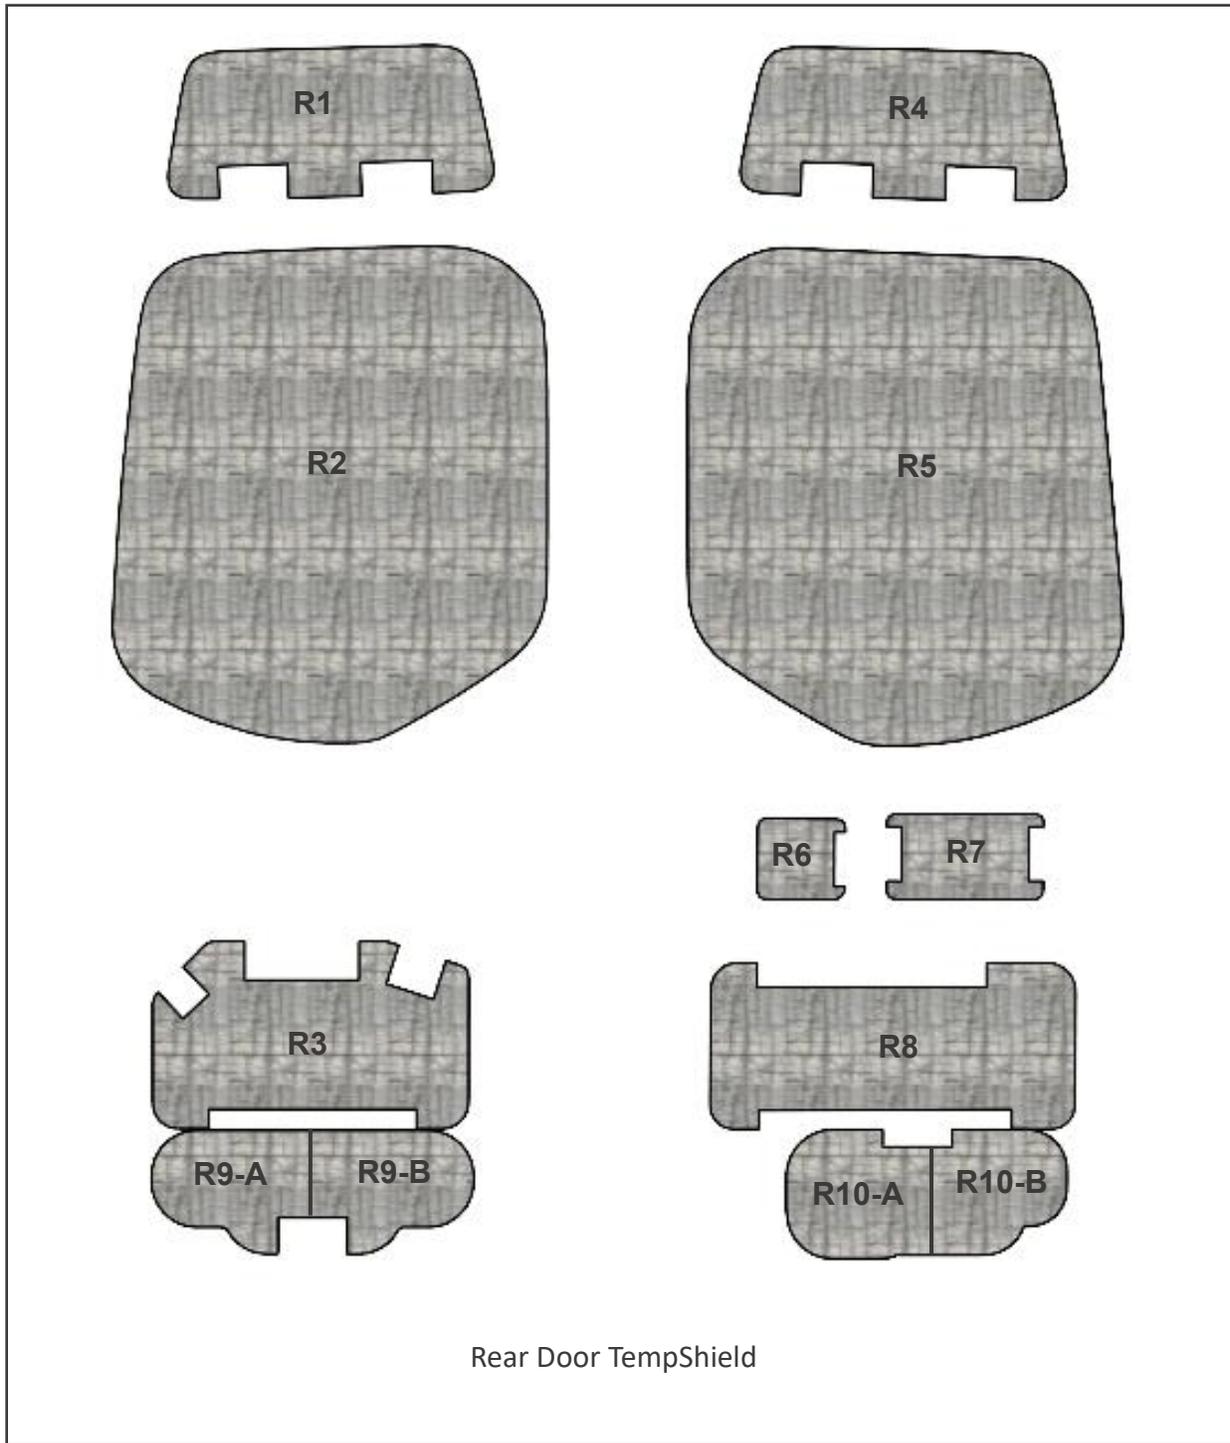


## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

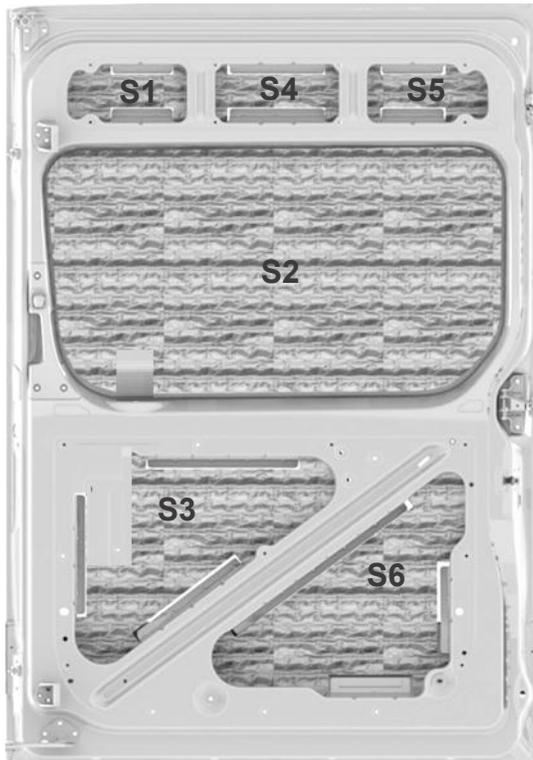

Sliding Door TempShield



Rear Door TempShield

# Sheet Layouts

