

# TEMPSHIELD ASSEMBLY INSTRUCTIONS

## MERCEDES SPRINTER 170'' CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)


56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents


- Walls ..... 3
  - Parts List – Driver Side Wall.....3
  - Parts List – Passenger Side Wall .....3
  - Assembly Instructions.....4
- Ceiling ..... 5
  - Parts List – Ceiling.....5
  - Assembly Instructions.....5
- Doors ..... 6
  - Parts List – Sliding Door .....6
  - Parts List – Rear Door .....6
  - Assembly Instructions.....7
- Sheet Layouts ..... 8

# Walls

## Parts List – Driver Side Wall

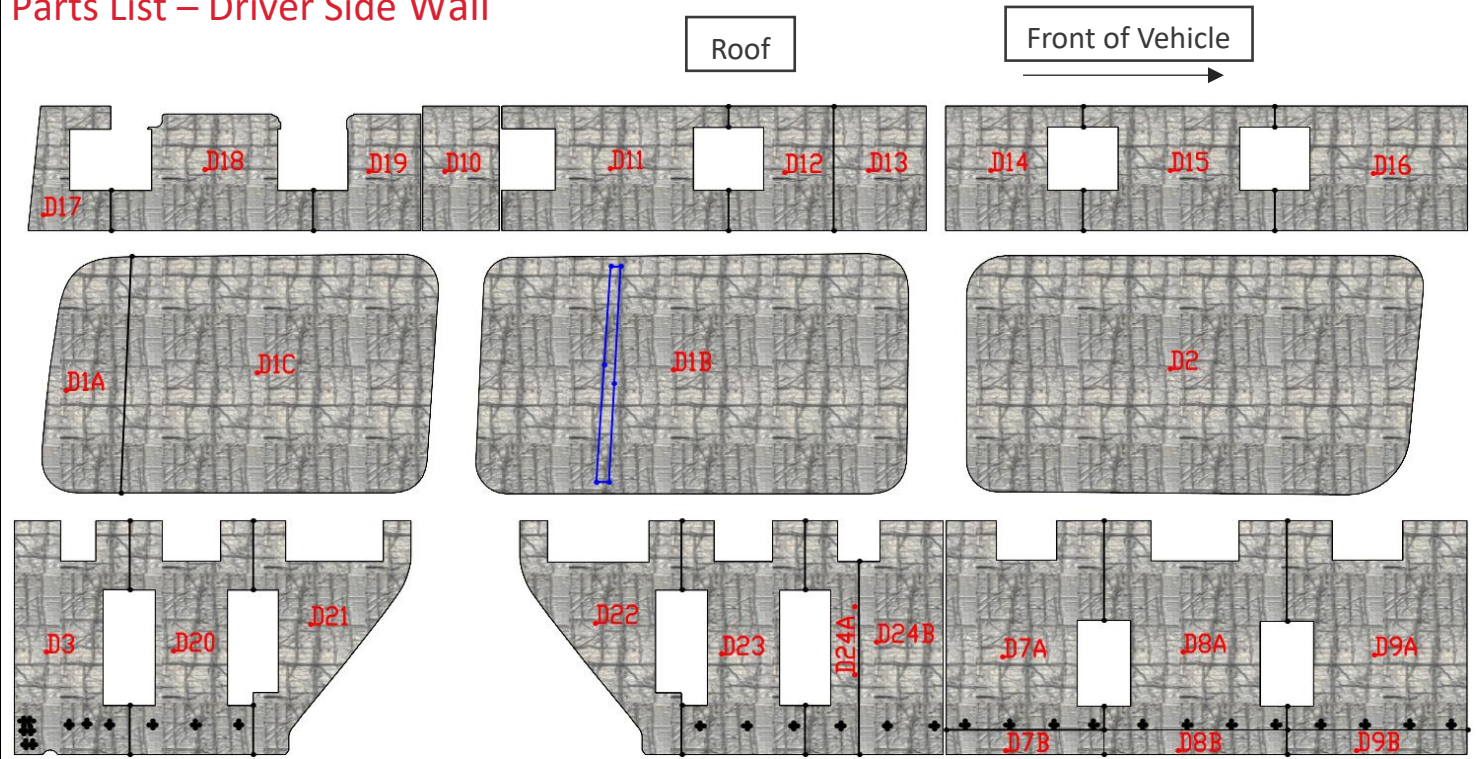

## Parts List – Passenger Side Wall

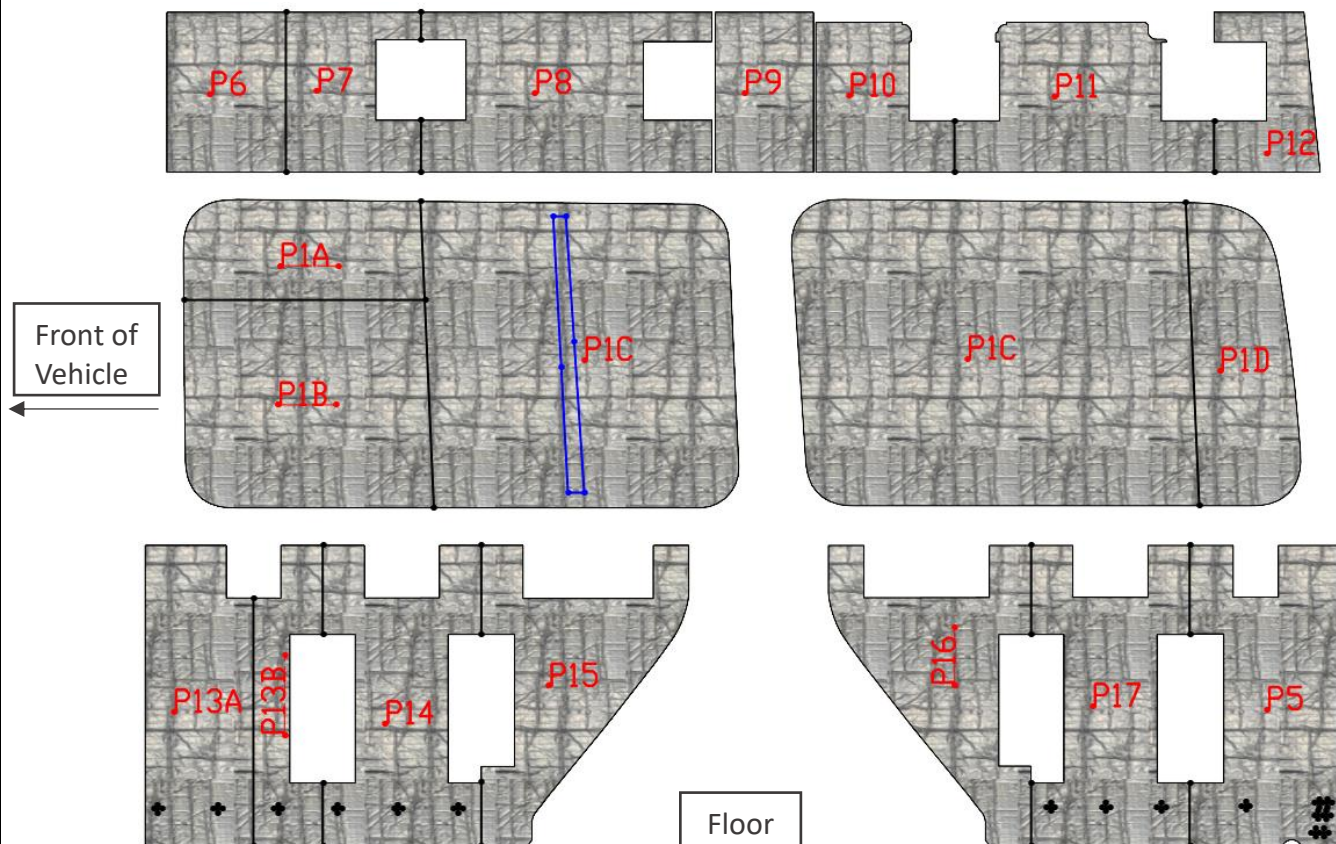



## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

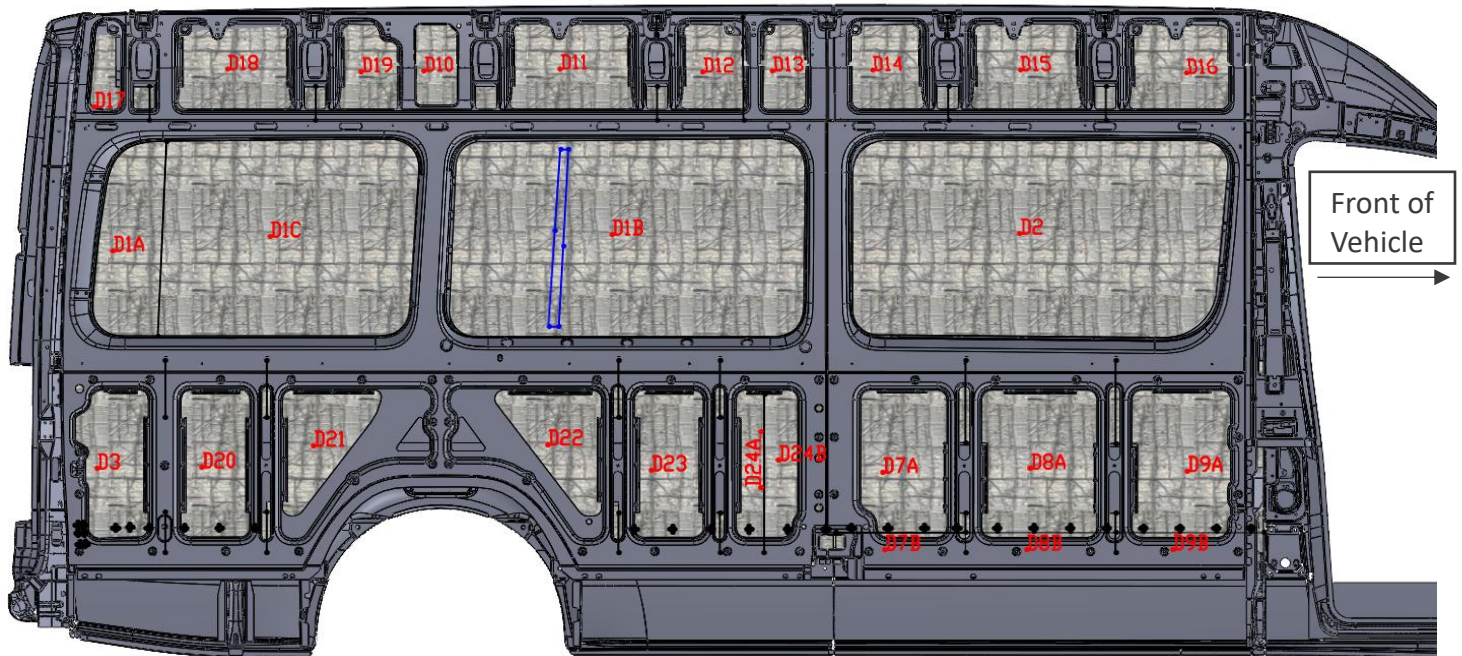


Figure 1: "Driver Side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side


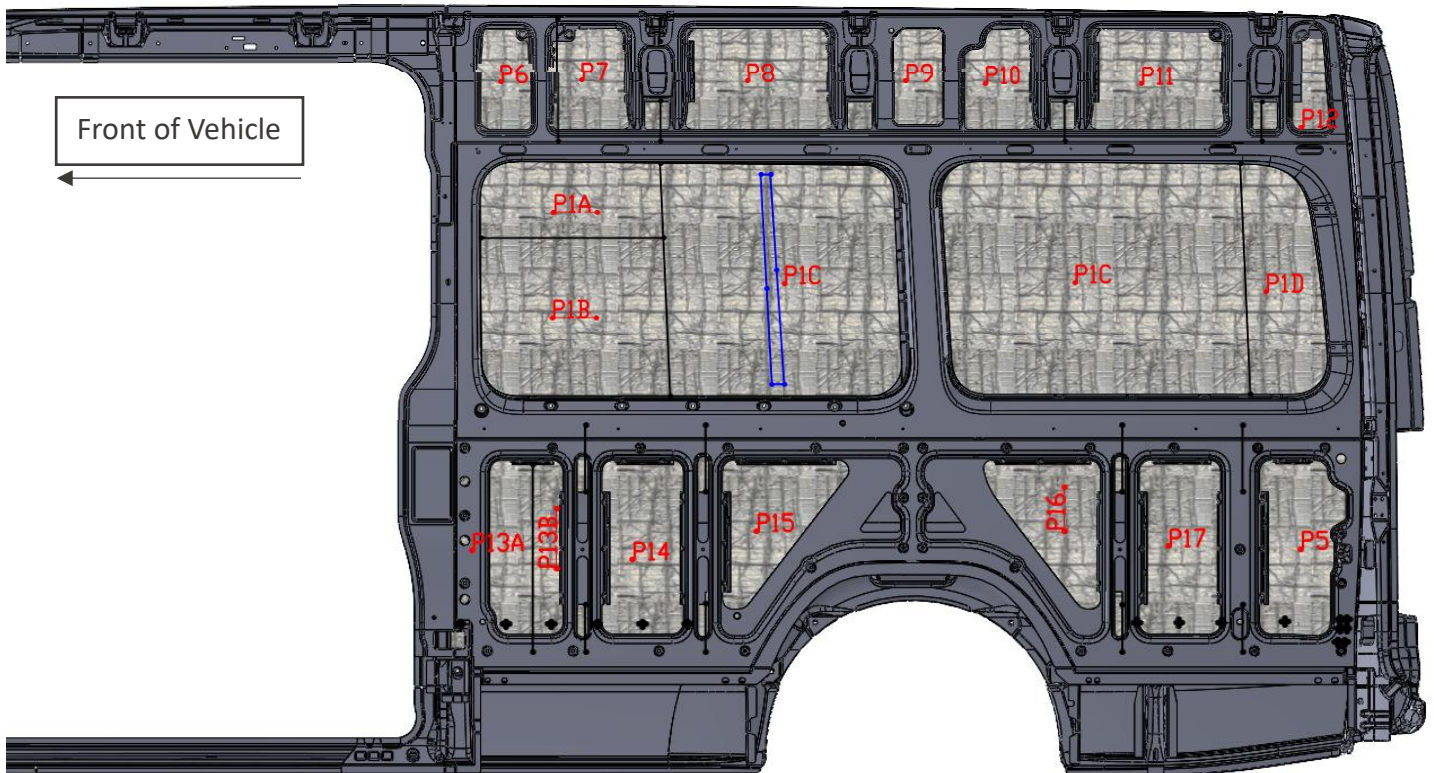


Figure 2: "Passenger Side TempShield Installed" This view is from Inside of Van-Viewing from Driver side



# Ceiling

## Parts List – Ceiling

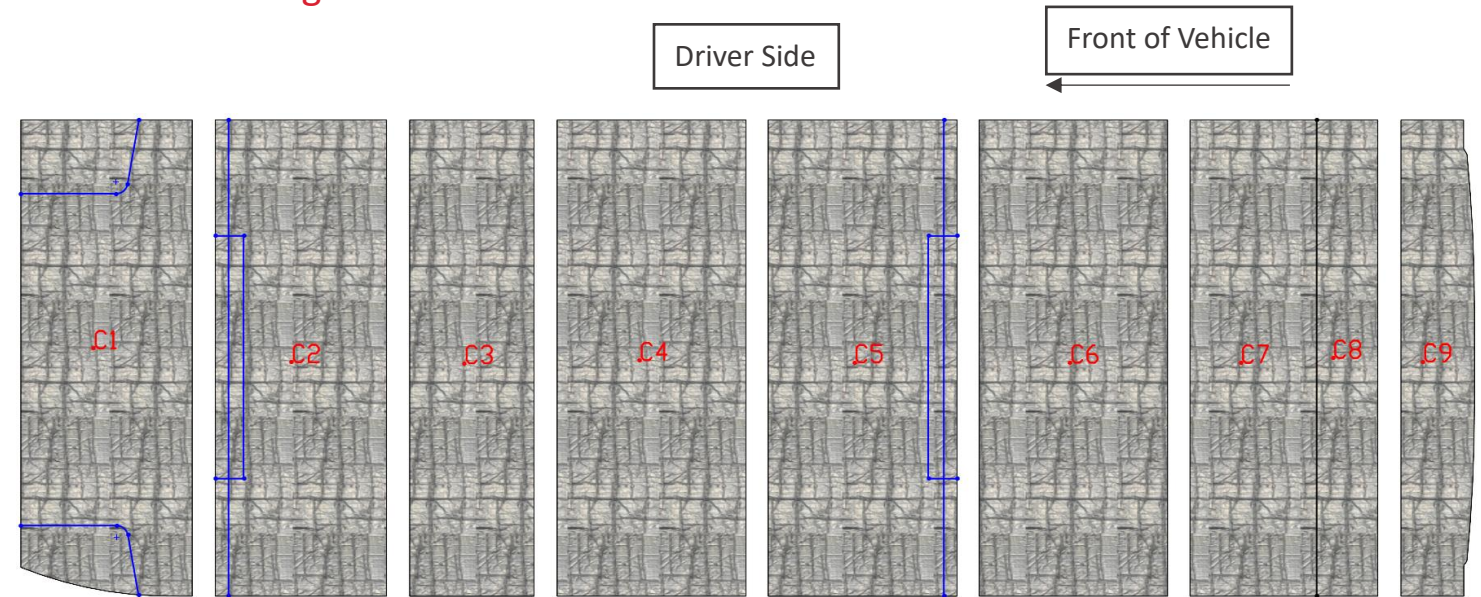

## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


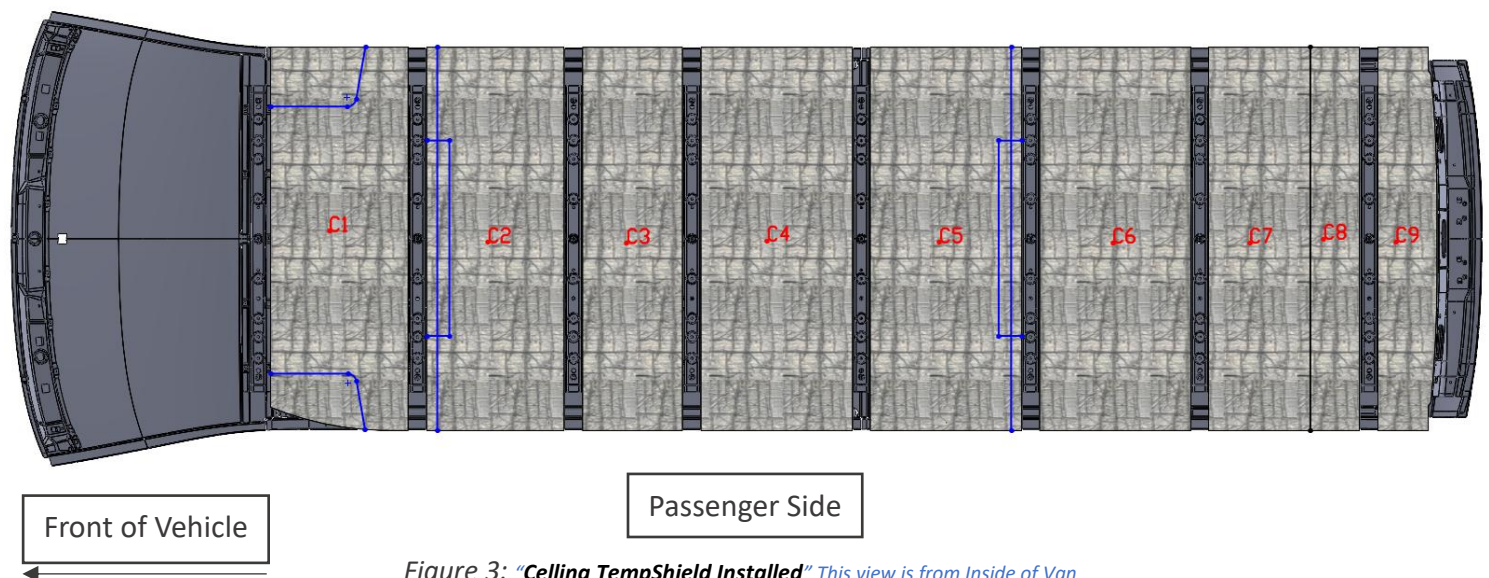



Figure 3: "Ceiling TempShield Installed" This view is from Inside of Van

# Doors

## Parts List – Sliding Door

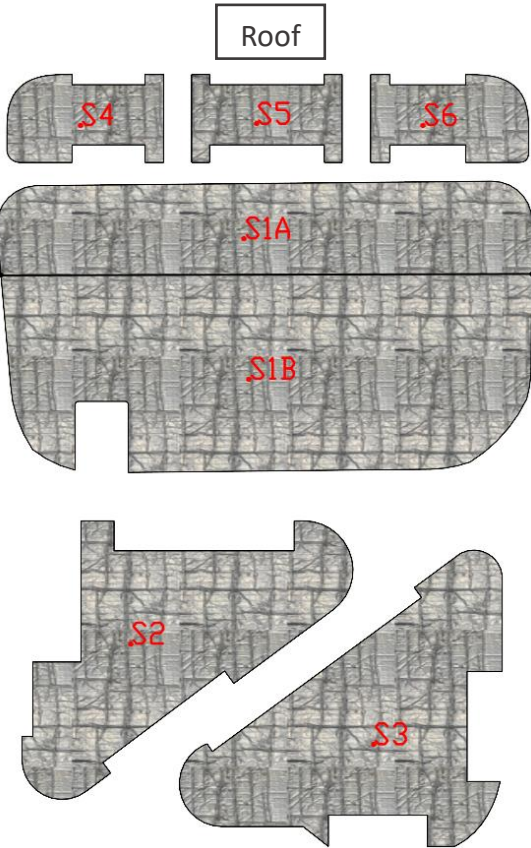

## Parts List – Rear Door

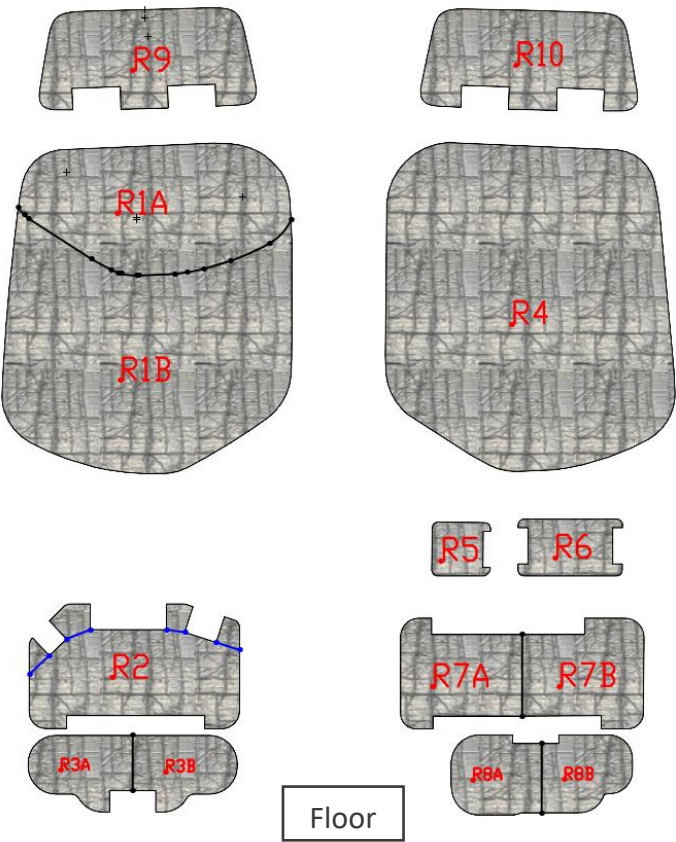




## Assembly Instructions


**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last page of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

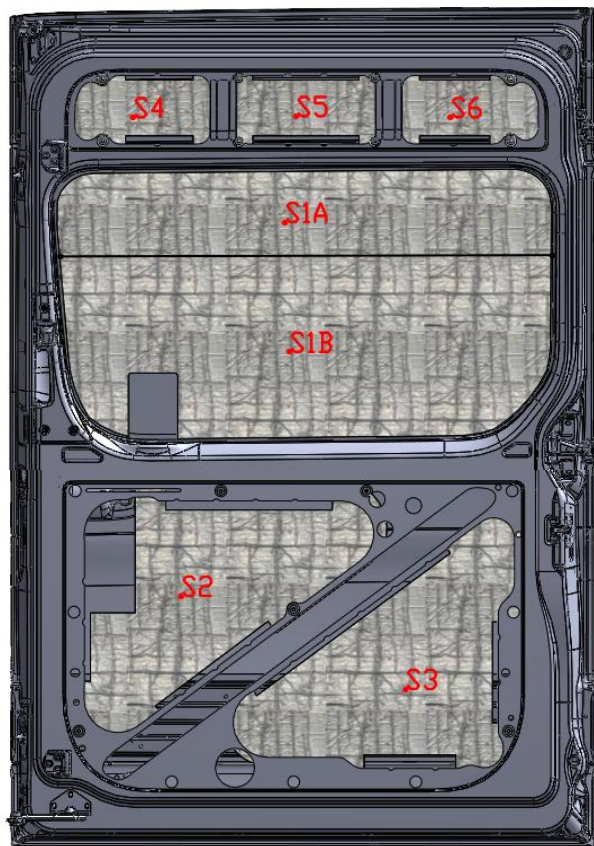

Sliding Door TempShield

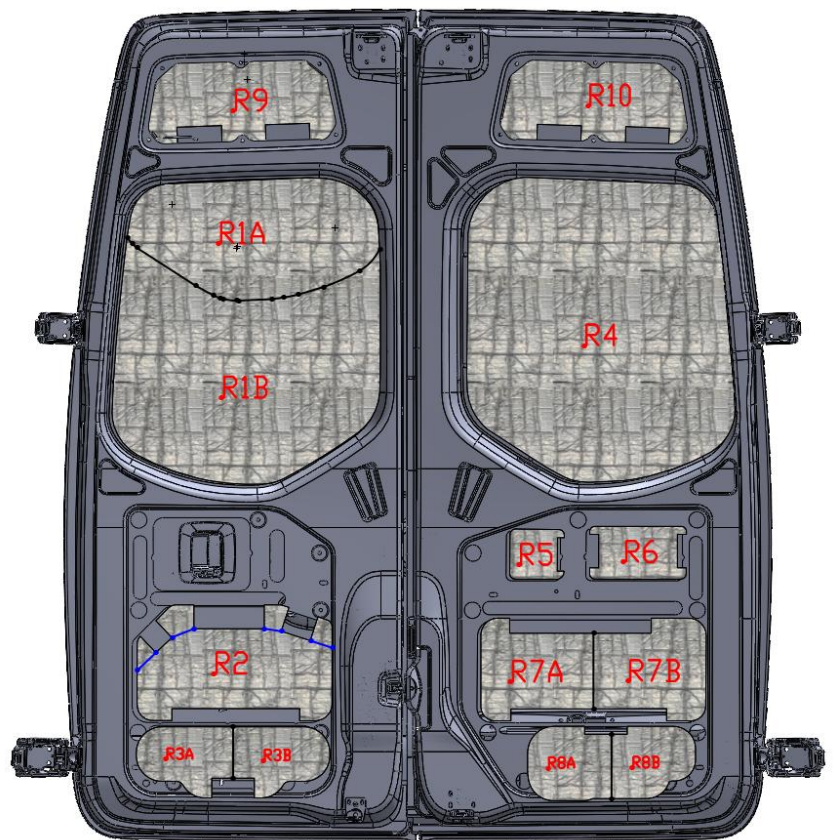

Rear Door TempShield

# Sheet Layouts

*Sections highlighted in **red** are not required. Sheet layouts in **green** are the window panels.*

