

TEMPSHIELD ASSEMBLY INSTRUCTIONS

RAM PROMASTER 159" CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043
customercare@legendfleet.com

56957 HWY 3 WEST,
TILLSONBURG,
ON N4G 4G8.

Table of Contents


- Walls 3
 - Parts List – Driver Side Wall 3
 - Parts List – Passenger Side Wall 3
 - Assembly Instructions..... 4
- Ceiling 5
 - Parts List – Ceiling..... 5
 - Assembly Instructions..... 5
- Doors 6
 - Parts List – Sliding Side Door 6
 - Parts List – Rear Door 6
 - Assembly Instructions..... 7
- Sheet Layouts 8

Walls

Parts List – Driver Side Wall


Roof

Front of Vehicle
→

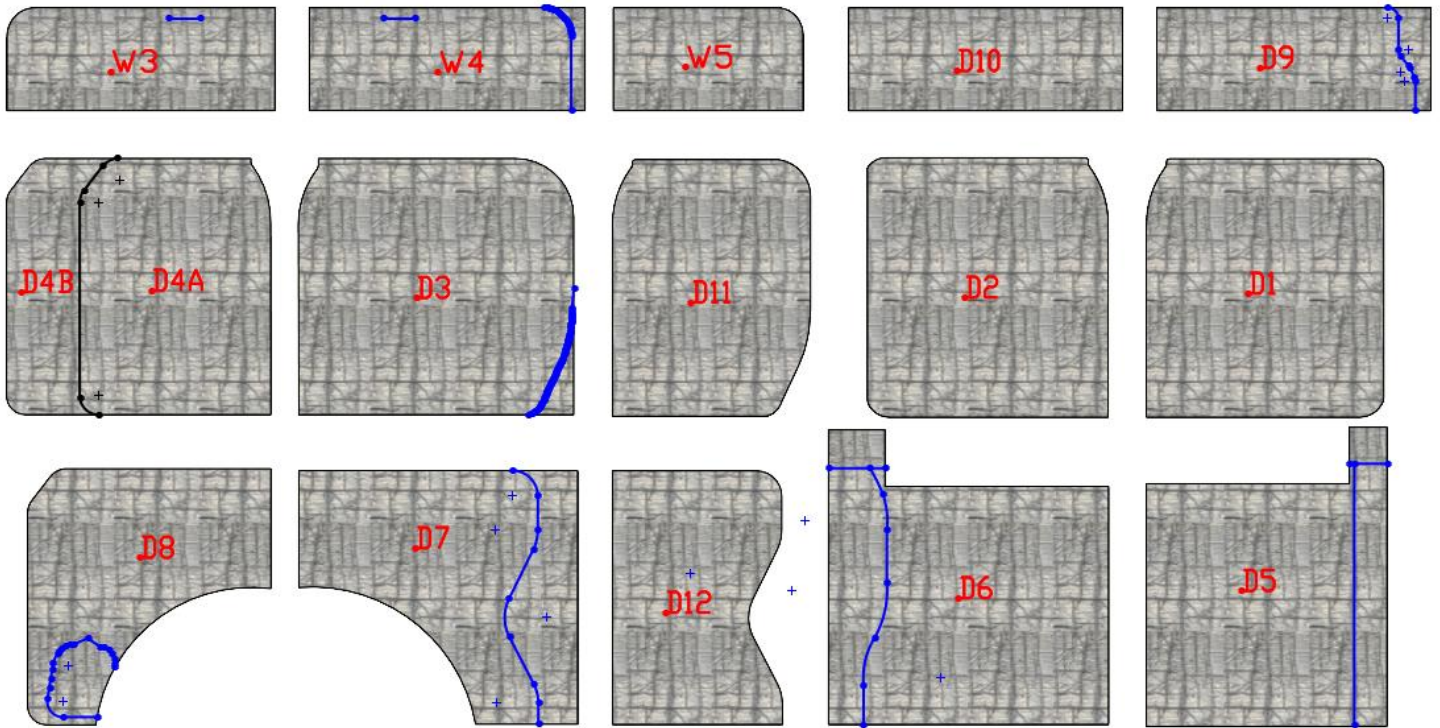

Parts List – Passenger Side Wall

Front of Vehicle
←

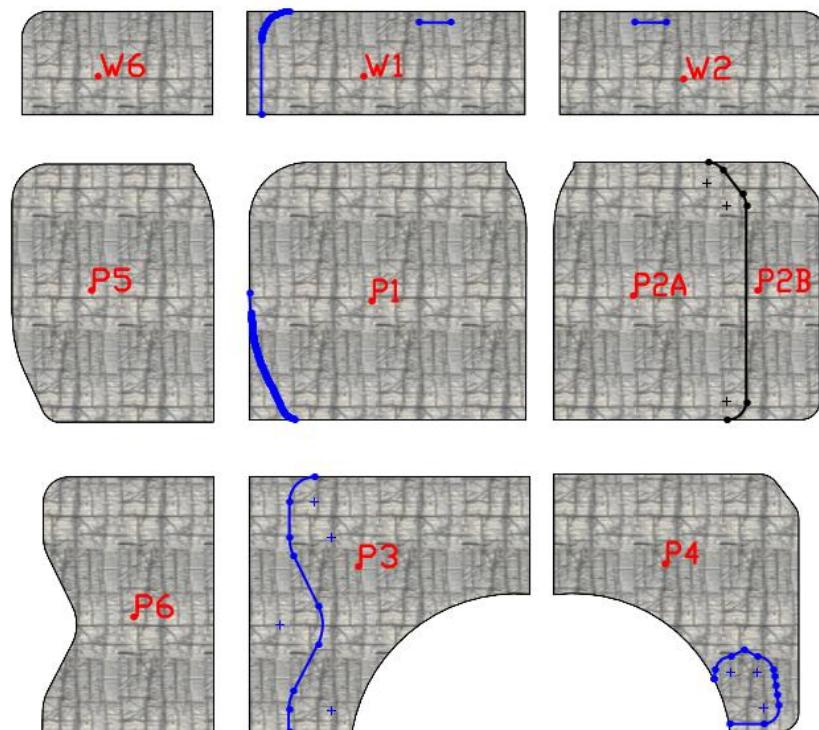

Floor

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last two pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

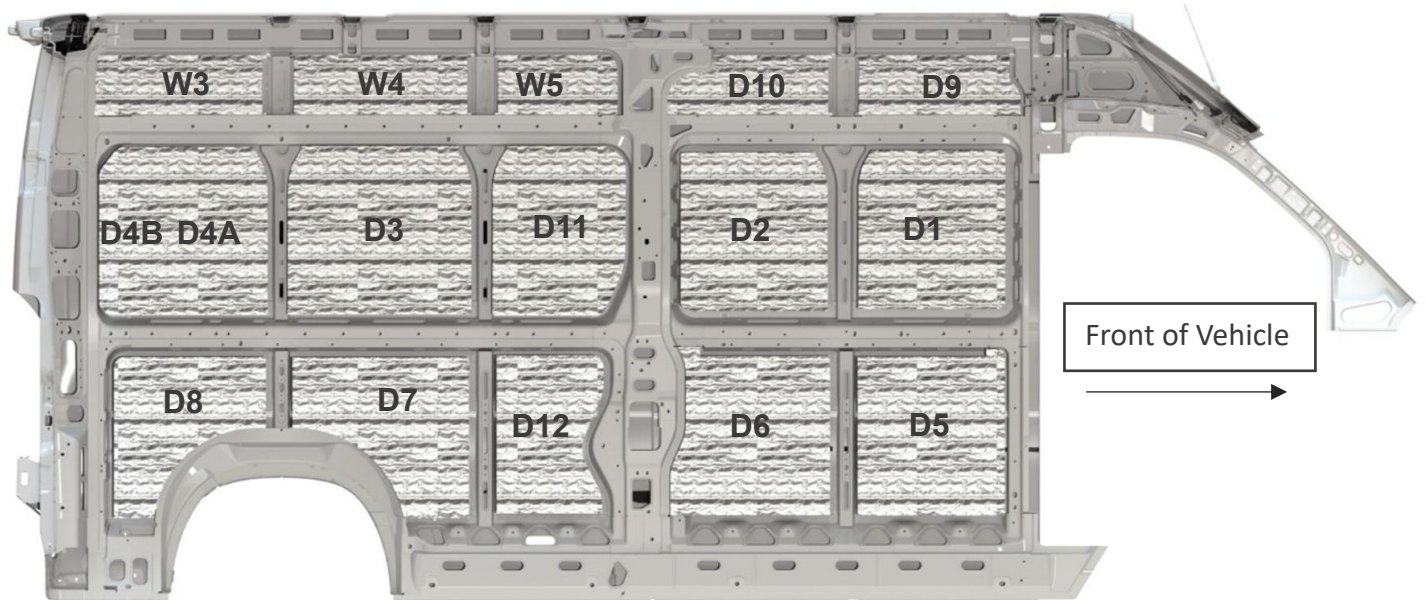


Figure 1: “Driver Side TempShield Installed” This view is from Inside of Van-Viewing from Passenger side


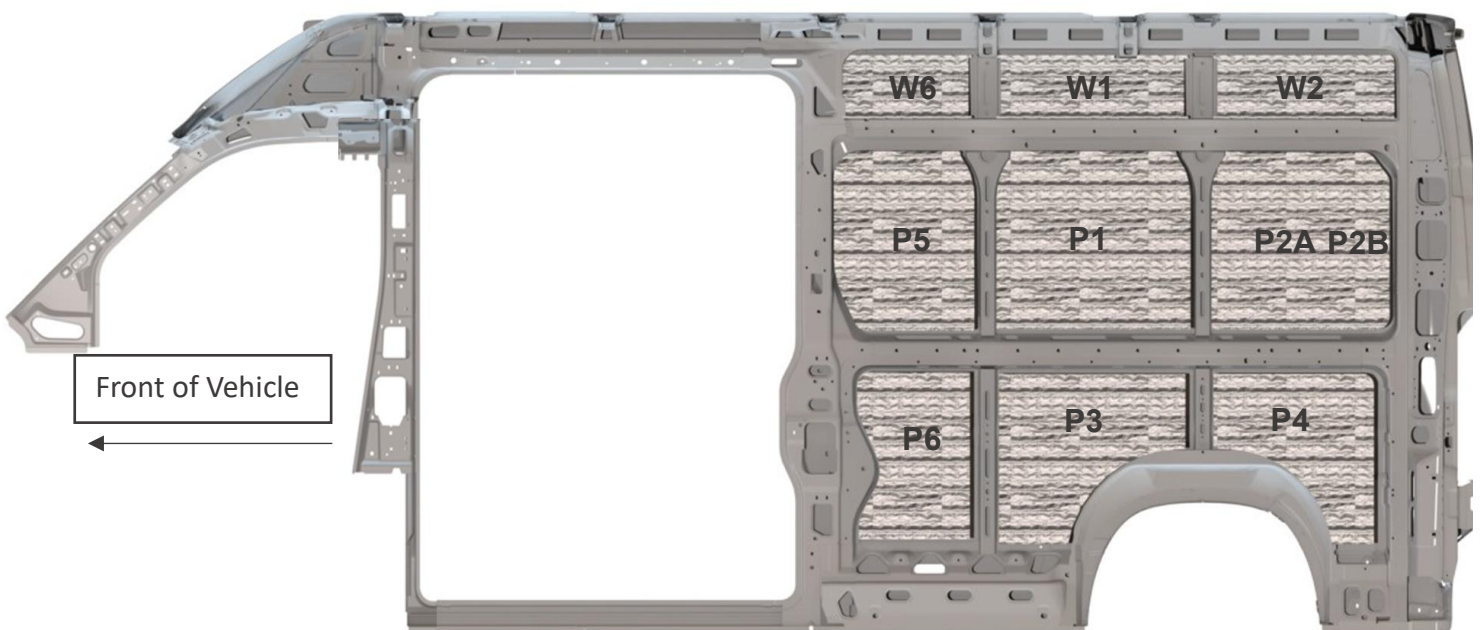


Figure 2: “Passenger side TempShield Installed” This view is from Inside of Van-Viewing from Driver side

Ceiling

Parts List – Ceiling

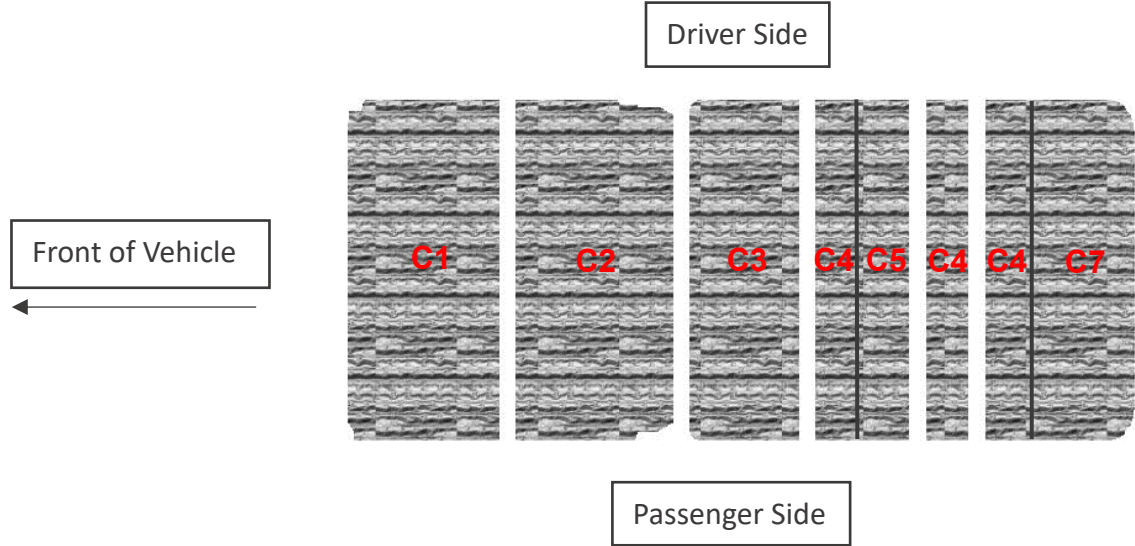

Assembly Instructions

Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last two pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.


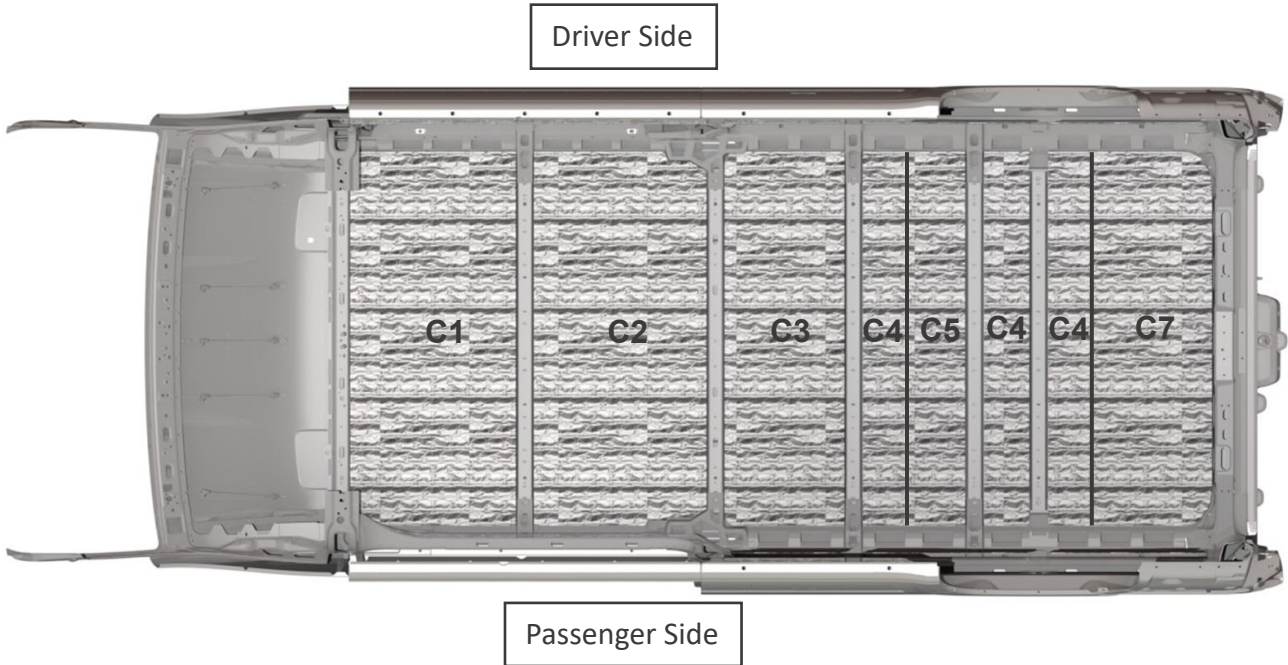



Figure 3: “Ceiling TempShield Installed” This view is from Inside of Van

Doors

Parts List – Sliding Side Door

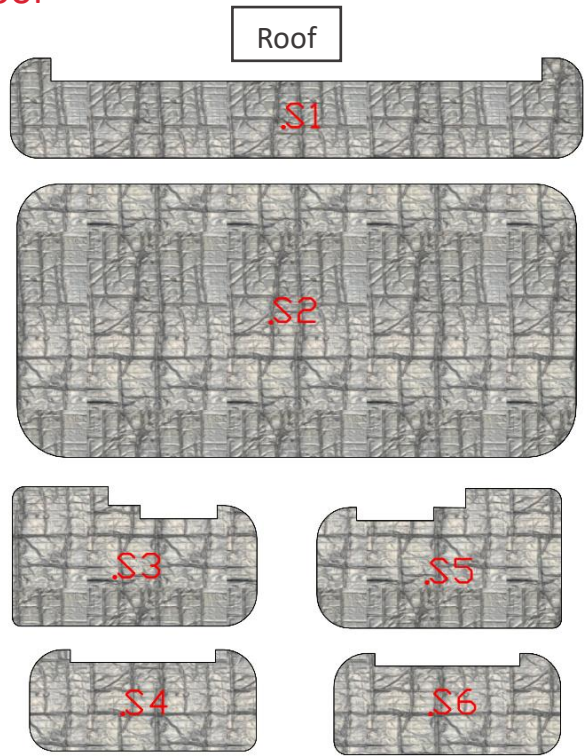

Parts List – Rear Door

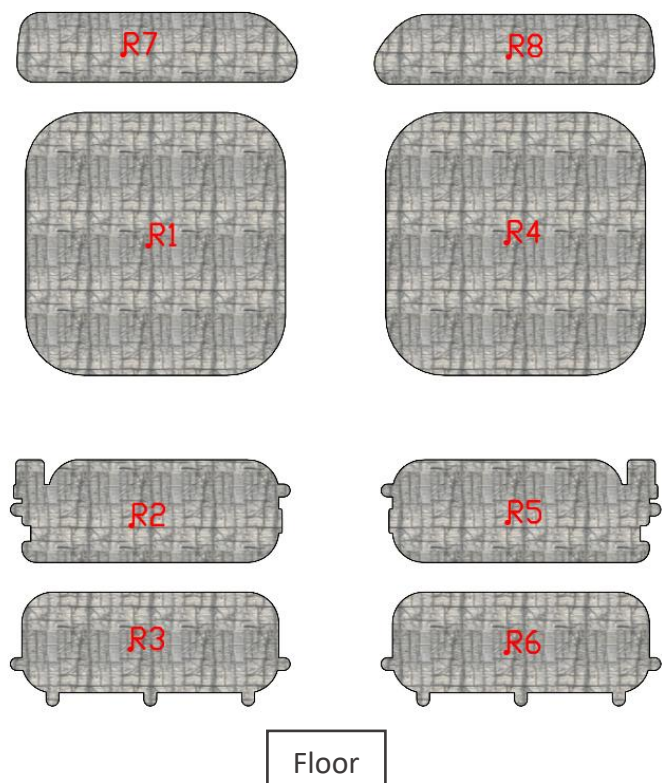


Assembly Instructions


Step 1: Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last two pages of this document.

Step 2: Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels.

Step 3: Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

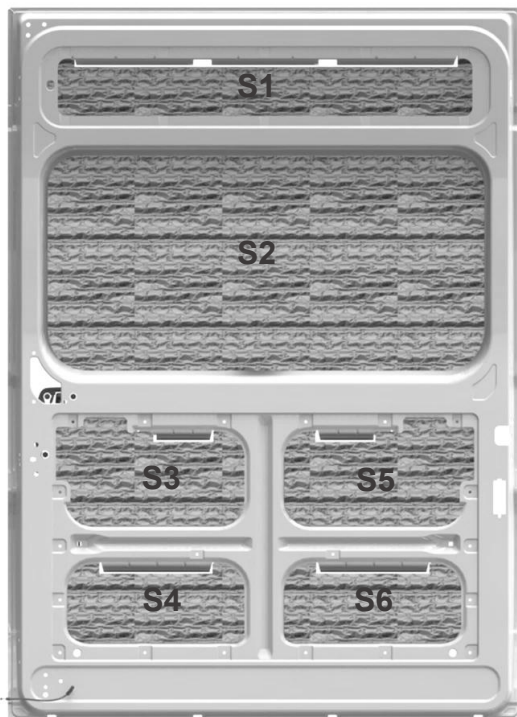

Passenger Side Sliding Door TempShield

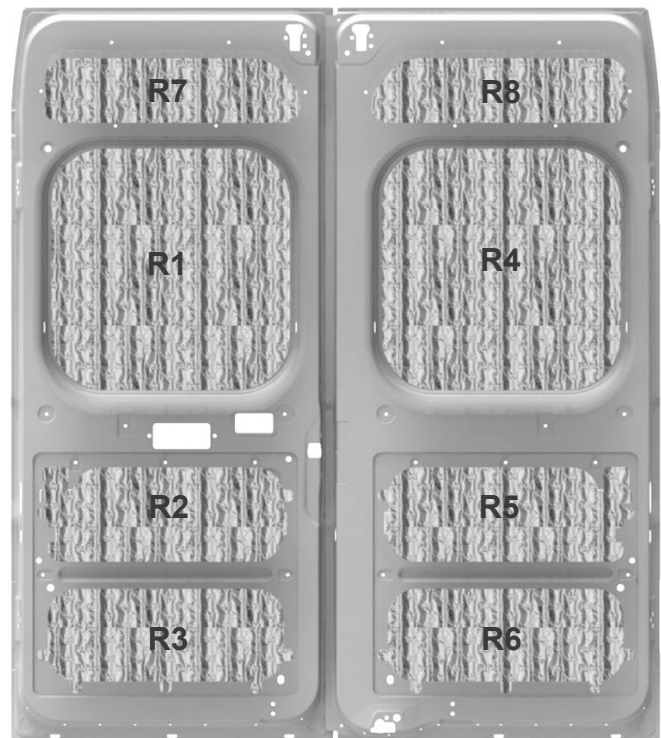

Rear Door TempShield

Sheet Layouts

Sections highlighted in red are not required.

