

# TEMPSHIELD ASSEMBLY INSTRUCTIONS

## RAM PROMASTER 159" EXTENDED CARGO- HIGH ROOF

This document presents the detailed procedures for assembling Legend Fleet components and accessories.

Customers can make use these step-by-step procedures and easily assemble without major difficulty.



519 688 1043  
[customercare@legendfleet.com](mailto:customercare@legendfleet.com)


56957 HWY 3 WEST,  
TILLSONBURG,  
ON N4G 4G8.

# Table of Contents


Walls .....	3
Ceiling .....	6
Doors .....	7

# Walls

## Parts List - Driver Side Wall

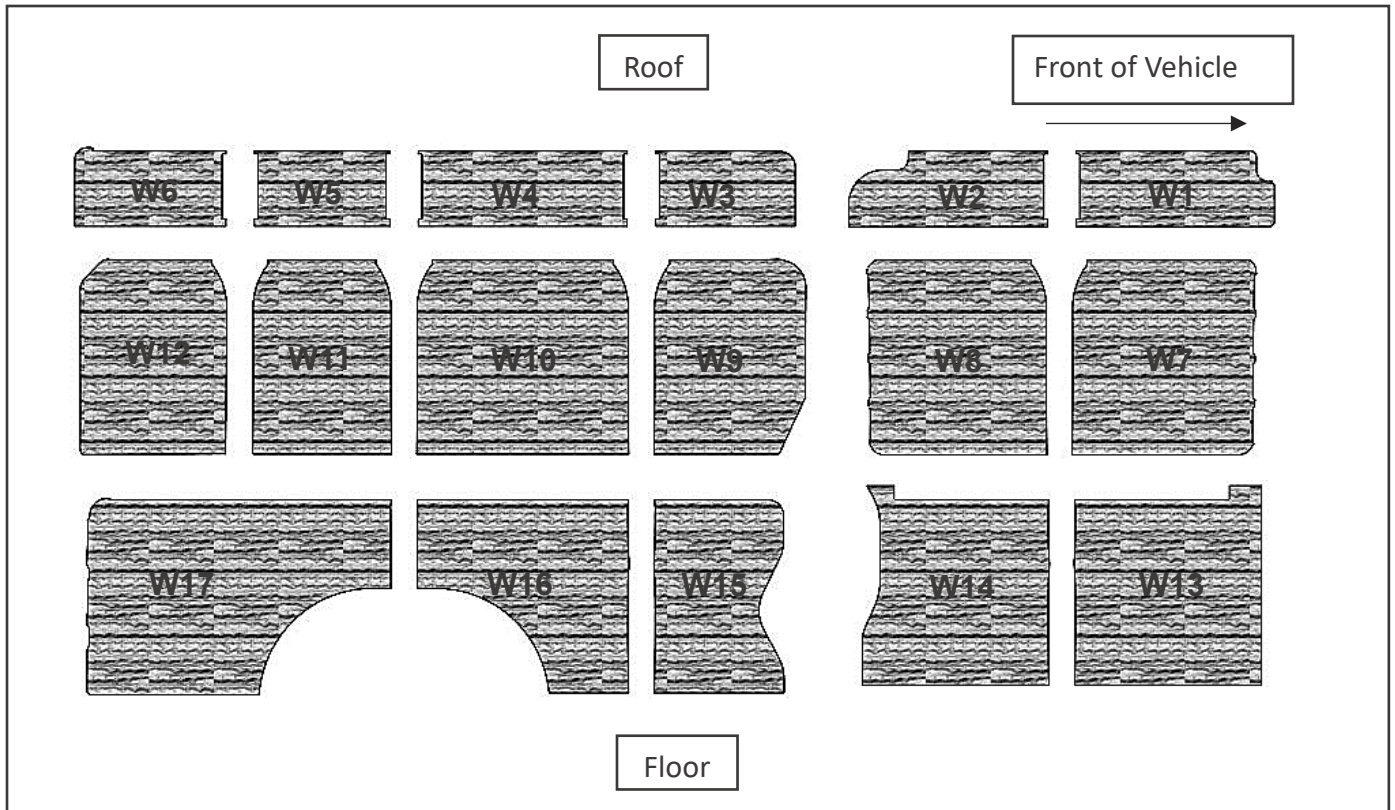

# Parts List - Passenger Side Wall

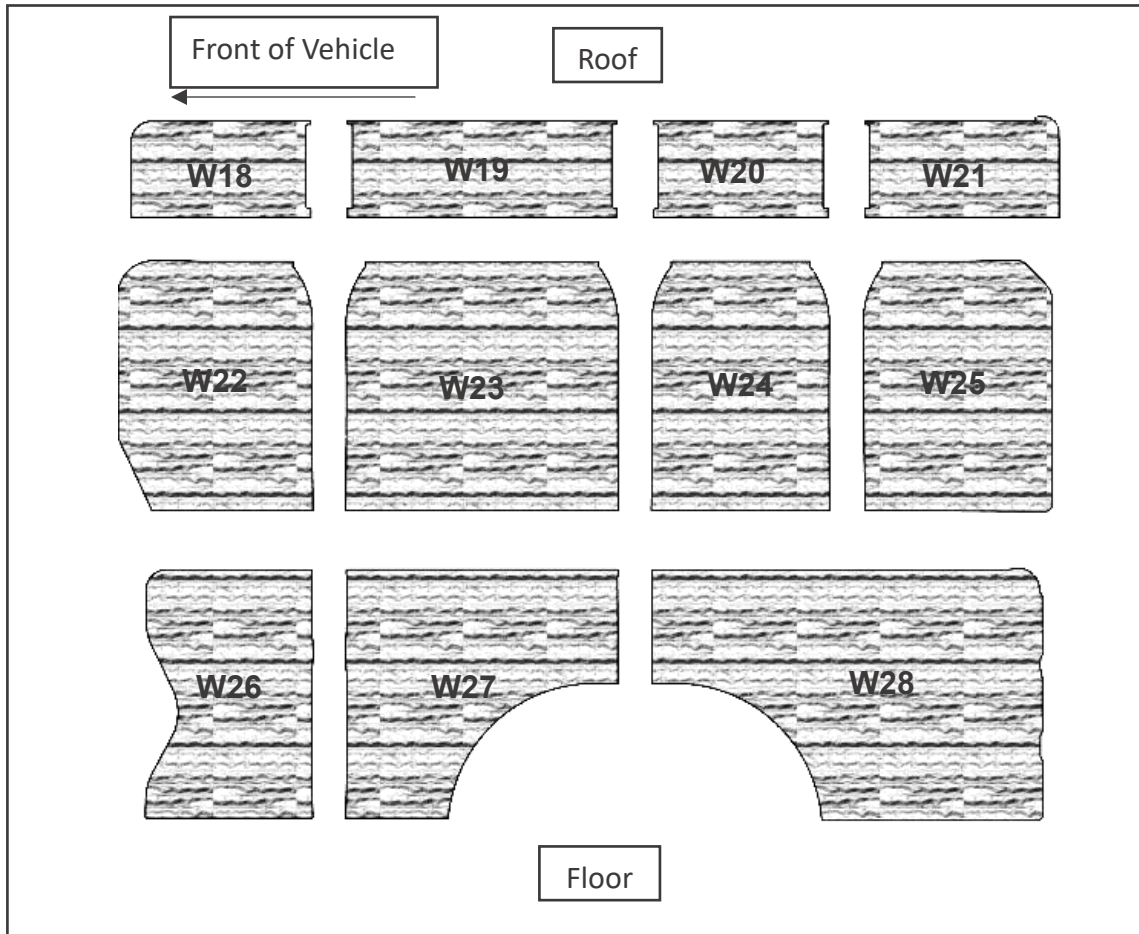

## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

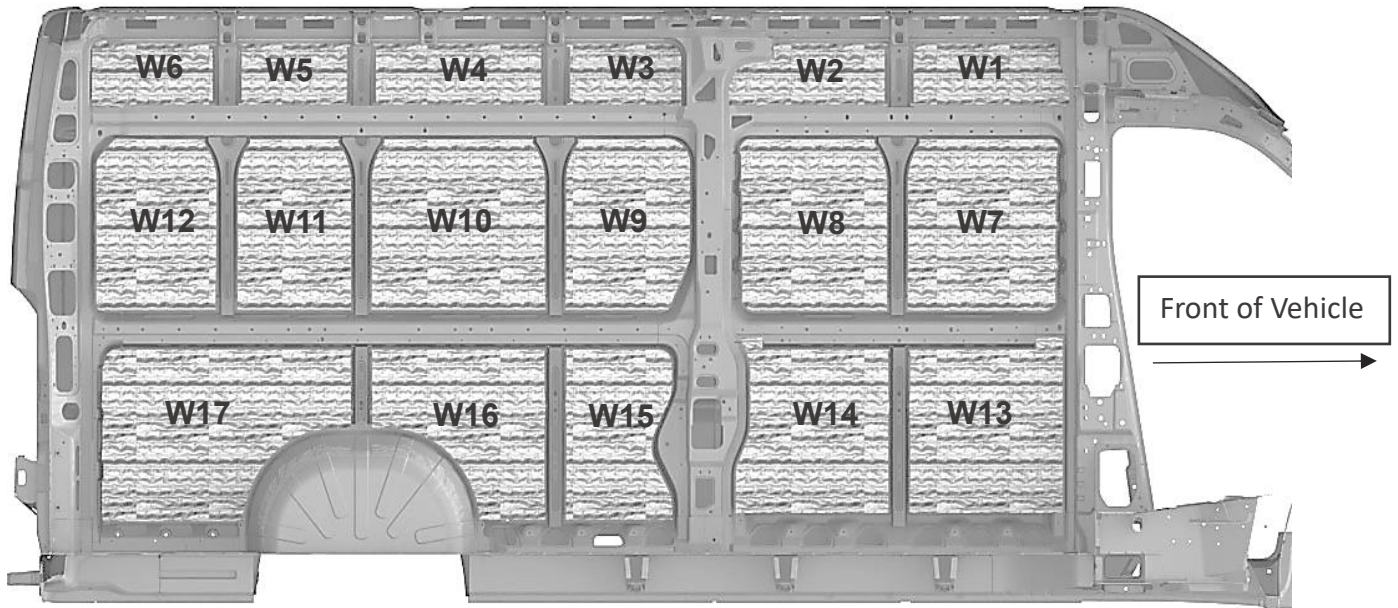


Figure 1

*"Driver side TempShield Installed" This view is from Inside of Van-Viewing from Passenger side*


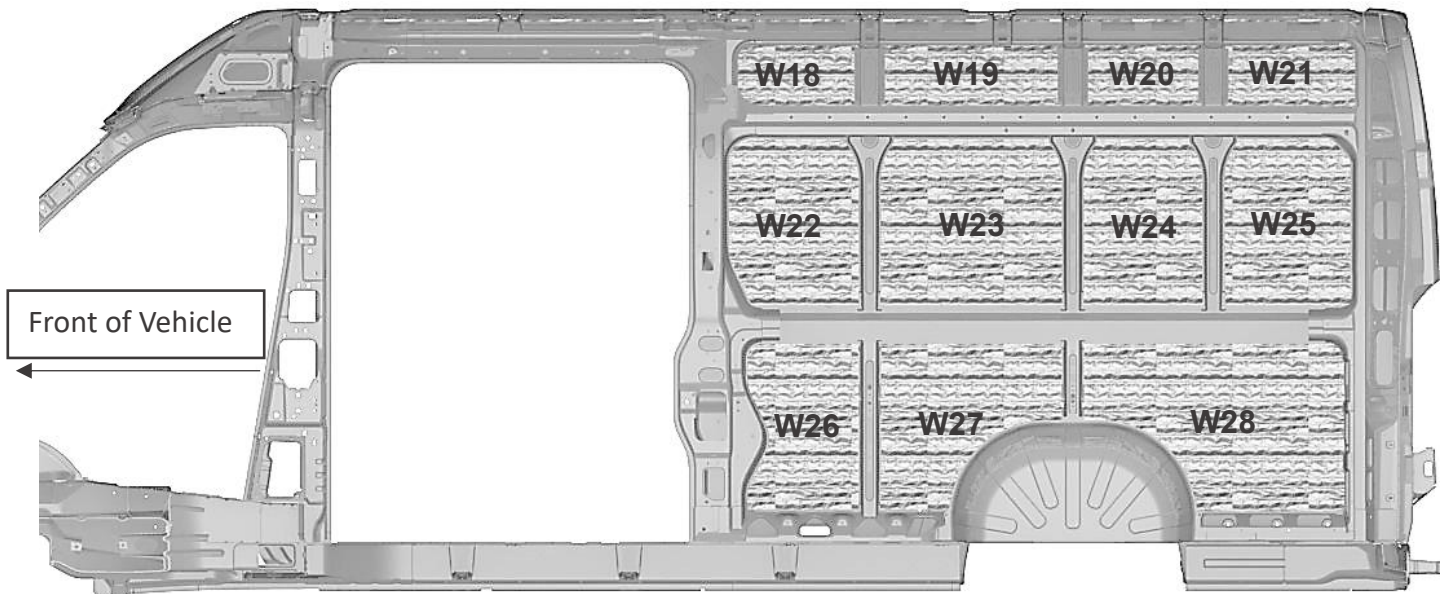


Figure 2

*"Passenger side TempShield Installed" This view is from Inside of Van-Viewing from Driver side*

# Ceiling

## Parts List – Ceiling

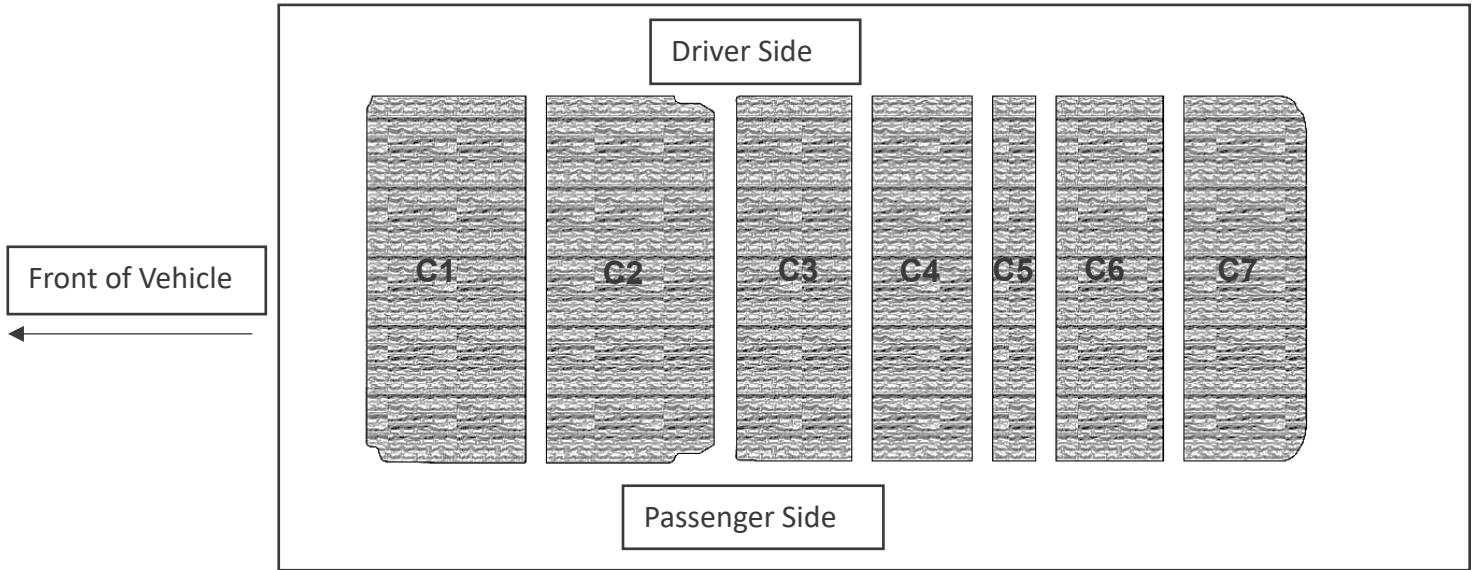

## Assembly Instructions

**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

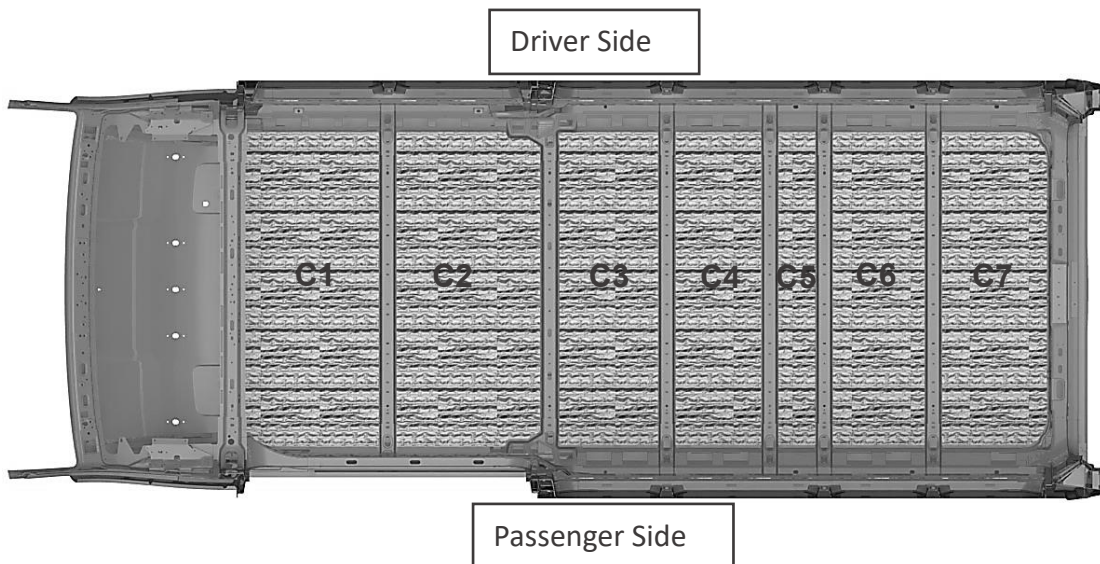



Figure 3

*“Ceiling TempShield Installed” This view is from Inside of Van*


# Doors

---

## Parts List – Sliding Door

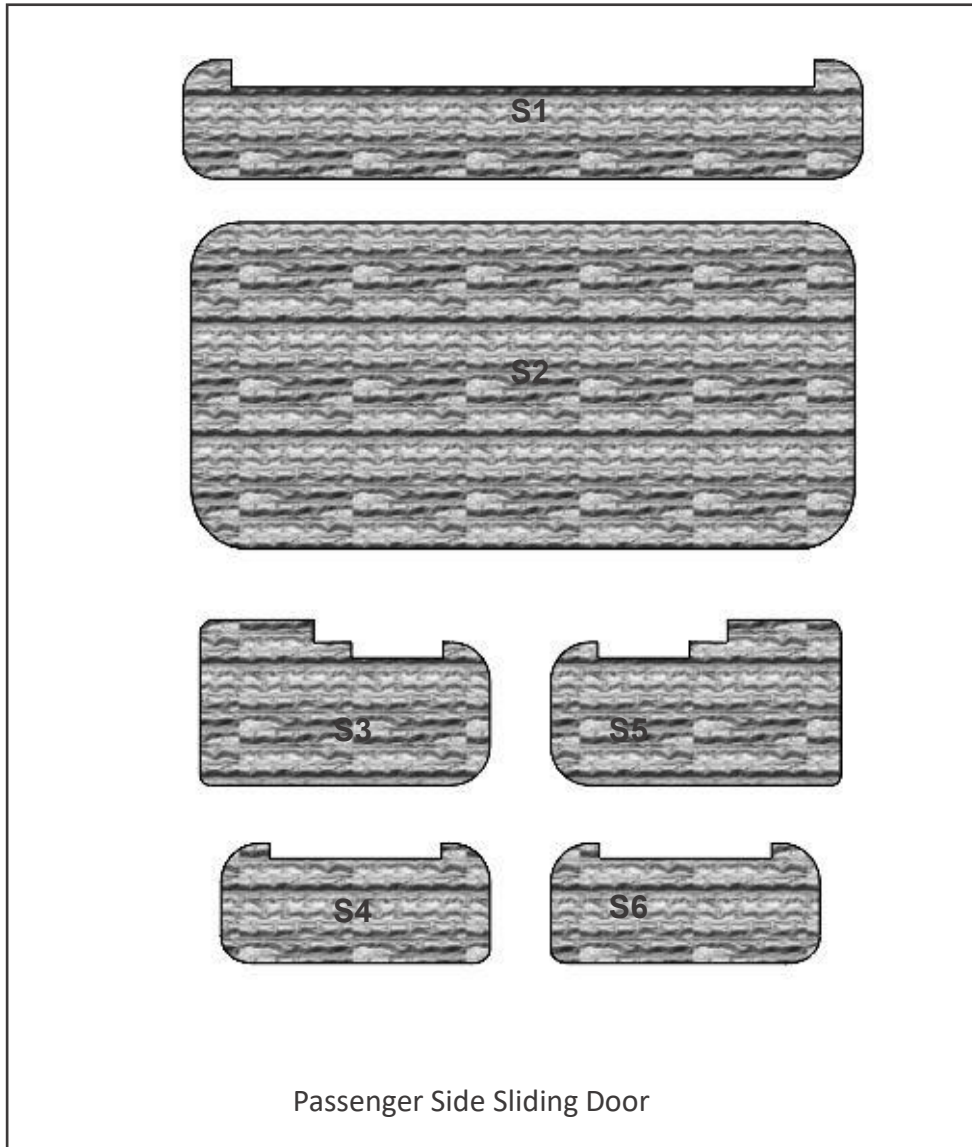

## Parts List – Rear Door

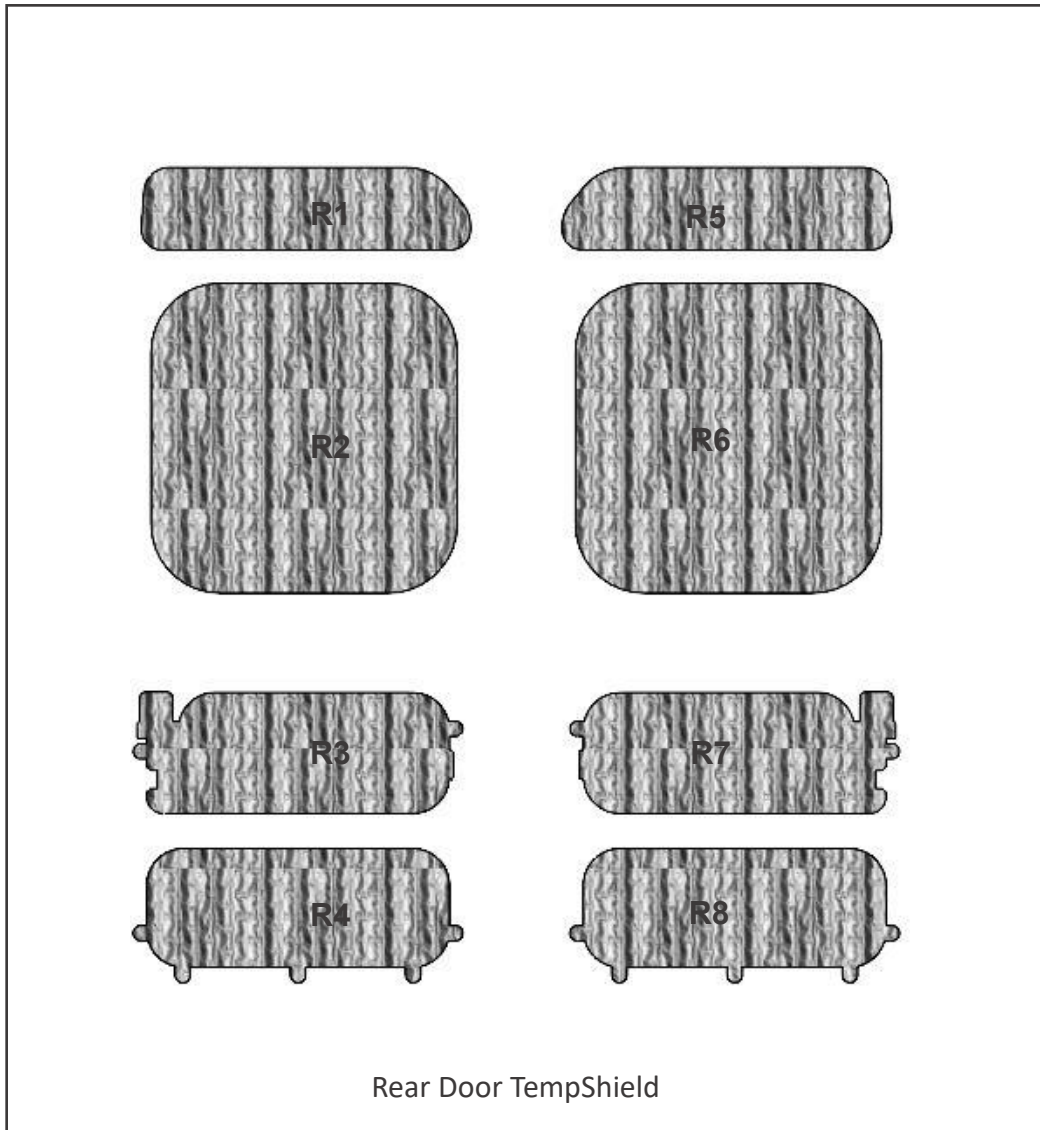




## Assembly Instructions


**Step 1:** Identify the TempShield Panels and their respective vehicle surfaces as shown below. For additional guidance, please refer to the sheet layouts found in the last three pages of this document.

**Step 2:** Wipe the identified surfaces of the vehicle clean, dry, free of dust, debris, or any foreign materials before adhering the TempShield panels. Remove TempShield panels off the sheet layouts using a utility knife.

**Step 3:** Peel off the protective layer of the TempShield and place its adhesive side to the Van body.

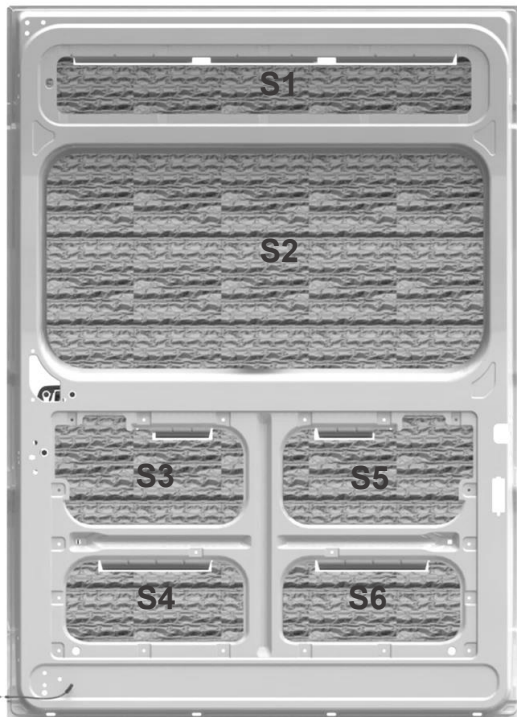

Passenger Side Sliding Door TempShield

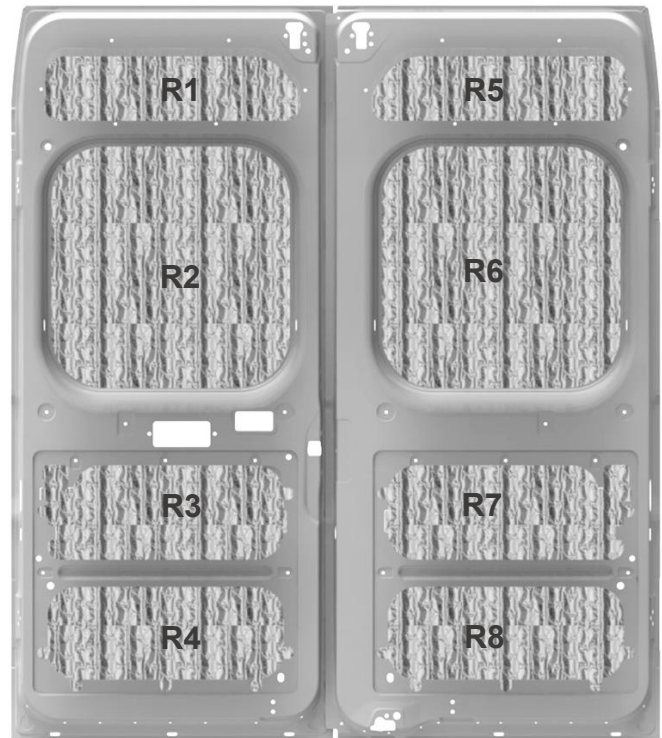

Rear Door TempShield

# Sheet Layouts

